RELEASED:10-27-92 REVISED: (REV.A) IPP

66867 VENT KIT

FOR 1-1/2" & 2" DIAPHRAGM PUMPS

GENERAL DESCRIPTION

The Diaphragm Pump Kit is intended for use in situations where the normal venting of the pilot valve is not acceptable.

INSTALLATION

- 1. Remove the air supply from the diaphragm pump.
- 2. Remove the muffler from the pump.
- 3. Install roll pins (B) and (D) in the adapter.

NOTE: Roll pins should not be inserted any farther than necessary.

 Install the adapter, rotate it to a point where it causes the least stress on the tubing.

- 5. Install the (A) roll pin in the pilot vent hole.
- 6. Install the (C) roll pin in the pump bottom (major valve vent).
- 7. Connect 93319-1 12" tube provided between locations (C) and (D).
- NOTE: Bend the tubing carefully and allow the maximum radius possible to avoid kinking, this could adversely affect the pump performance.
- 8. Connect 59631-1 12" tube provided between locations (A) and (B).
- 9. Reinstall the muffler.

