




## 640081-B STRAP WRENCH

### TO INSTALL NEW STRAP ON NO. 1, NO. 2

1. REMOVE PIN USING PUNCH AND HAMMER.
2. POSITION HANDLE AND STRAP AS ILLUSTRATED.
3. INSERT PIN THROUGH THE WRENCH HEAD AND THE LOOP OF THE STRAP.

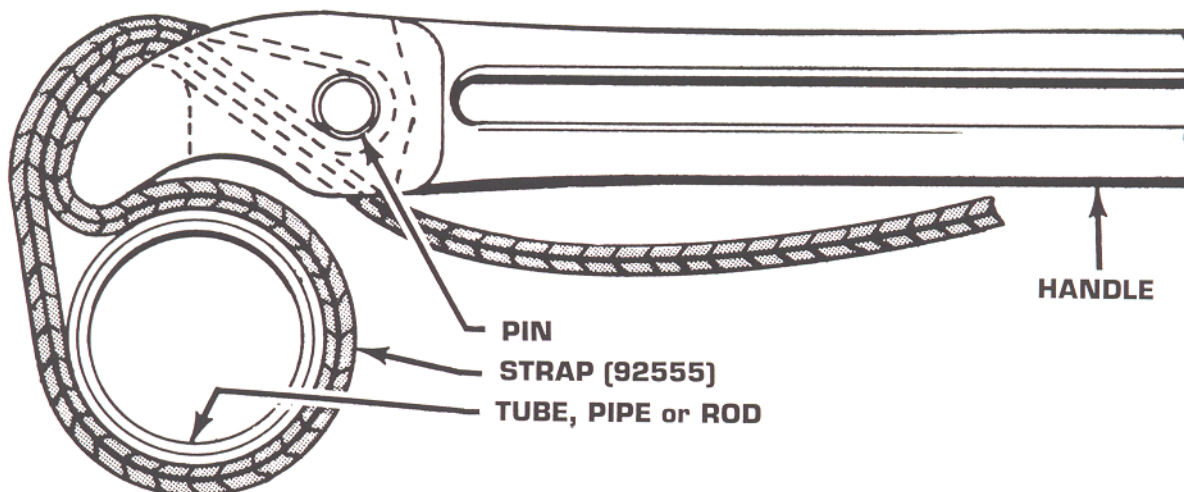

### OPERATION

1. WRAP STRAP AROUND WORKPIECE AS ILLUSTRATED.
2. STRAP AND TUBE SHOULD BE FREE OF GREASE AND OIL.
3. APPLY POWDERED ROSIN TO STRAP OCCASIONALLY.

**NOTICE:** READ THIS MANUAL CAREFULLY BEFORE OPERATING,  
INSTALLING OR SERVICING THIS EQUIPMENT.

**THE ARO CORPORATION**

ONE ARO CENTER, BRYAN, OHIO 43506  
PHONE - 419-636-4242

PRINTED IN USA

