INCLUDING: OPERATION, INSTALLATION & MAINTENANCE

INCLUDE 615052 OPERATORS MANUAL

RELEASED: 5-23-56 **REVISED: 10-15-87**

PEDESTAL MOTOR OIL DRAIN

IMPORTANT: READ THIS MANUAL CAREFULLY BEFORE INSTALLING, **OPERATING OR SERVICING THIS EQUIPMENT.**

GENERAL DESCRIPTION

This model is the pedestal type drain designed for a full size drain job in a small space. It is equipped with a four gallon bowl and is used with a 615052 (included with unit) drain adapter that automatically opens drain valve in bowl and empties waste oil into drum or piping to underground tank. This model is shipped complete in two cartons

OPERATING INSTRUCTIONS

- 1. To raise bowl, twist 73151 cap counterclockwise to release 73152 Spring, then lift to desired level, release 73151 cap and bowl will remain in desired position.
- 2. To lower bowl, twist 73151 cap counterclockwise just enough to let bowl down easy.

CAUTION: Do not raise or lower funnel quickly. This will prevent oil splashing and parts damage.

TROUBLE SHOOTING

- 1. If bowl leaks at valve, replace the 70606 drain seal.
- 2. Clean screen and valve mechanism with solvent to keep it open and working freely.



