615025-B 615026 615029

> RELEASED: 10-7-86 REVISED: 7-7-94 (REV.D) IPP/PSE

### 615025-B, 615026, 615029 ROLL-AWAY OIL PAN DRAIN

#### **GENERAL DESCRIPTION**

The Roll–Away Oil Pan drain is used to collect and transfer contaminated waste fluids to a remote storage area.

#### INSTALLATION


To adjust the roller width to fit the width of the pit tracks.


- 1. Screw (4) street nipple into the outlet on the side of the drain assembly. (Models 615025–B and 615029 only)
- 2. Screw the (4) nipple, (5) ball valve and (6) adapter into the outlet.
- Loosen (10) screws and slide (8) bar assembly to desired width. Tighten (10) screws.
- 4. Place Roll-Away Oil Pan Drain with 4 rollers on service pit tracks.

#### **OPERATING INSTRUCTIONS**

Make sure the ball valve is in the "CLOSED" position at all times except for when draining the pan.


- Place the Roll-Away Oil Pan directly beneath the engine crankcase outlet.
- 2. Unscrew the oil plug from the engine crankcase. The grill assembly will serve as a CATCH-ALL and filter.
- 3. Let oil from crankcase drain into the Roll-Away Oil Pan Drain.
- 4. To empty drain assembly: Connect a hose (not furnished with unit) to the 1–1/2 NPT end of the coupler, attach the other end of the hose to the storage supply connection.
- 5. Engage the two arms on side of the coupler toward adapter and turn the ball assembly to "OPEN" position.

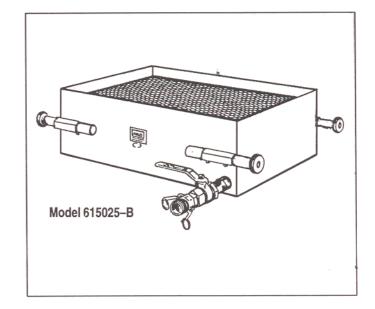


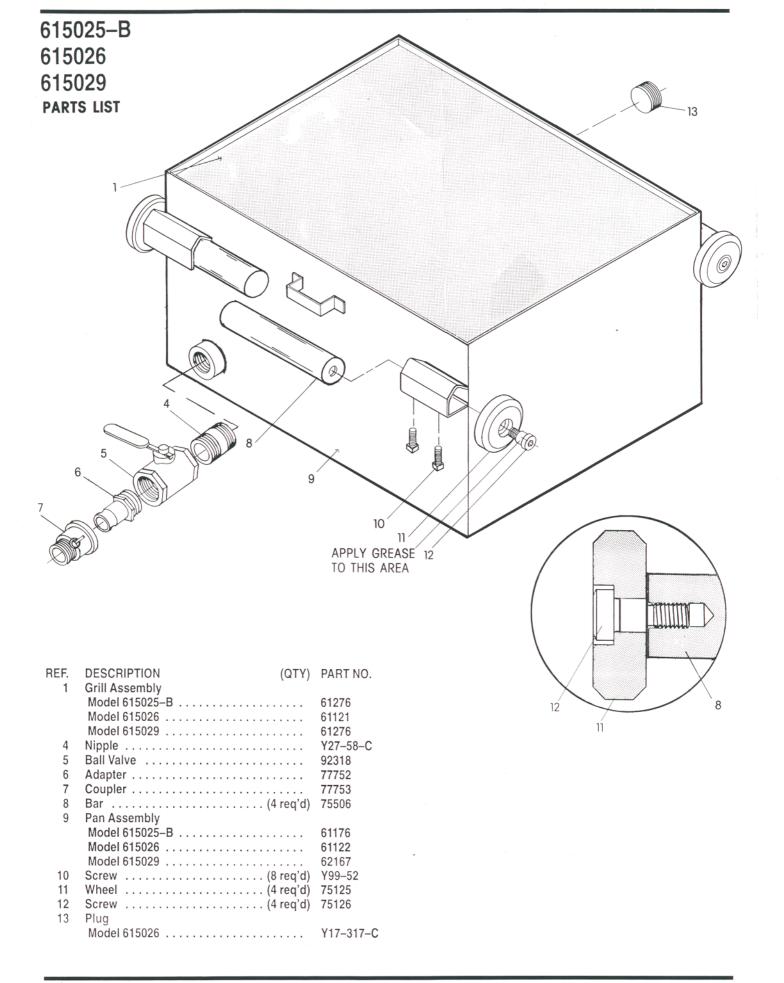

## 615025-B, 615029

# ROLL-AWAY OIL PAN DRAIN OVERALL DIMENSIONS

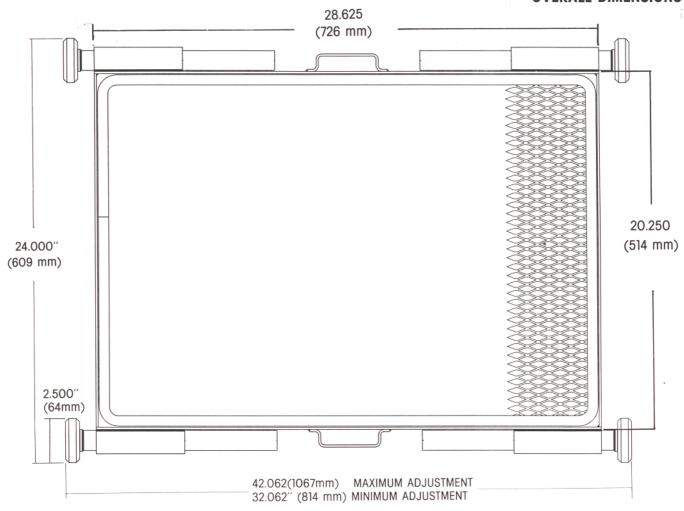

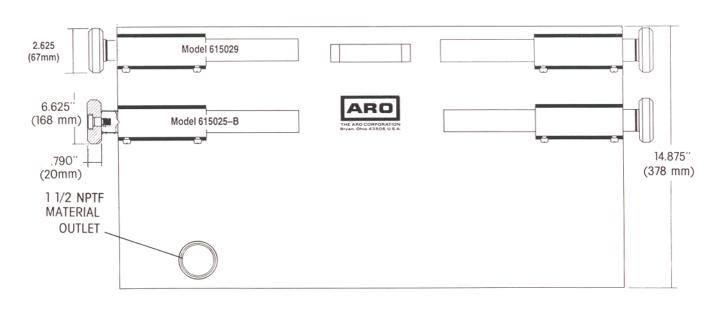

# 615026 ROLL-AWAY OIL PAN DRAIN OVERALL DIMENSIONS

