

# OPERATOR'S MANUAL

INCLUDING:  
OPERATION, INSTALLATION, & MAINTENANCE

**640037**

**640038**

**640039**

**640153**

RELEASED: 3-2-84

REVISED: IPP/PSE

THIS MANUAL COVERS THE FOLLOWING:  
**640037 LUBRO CLAMP**

SEE FIGURE 1

**640039 FILTER ASSY**


SEE FIGURE 2

**640038/640153  
LOW LEVEL CUT-OFF**

SEE FIGURE 3

## 640037 LUBRO CLAMP ASSY

\*2578 CLAMP ASS'Y

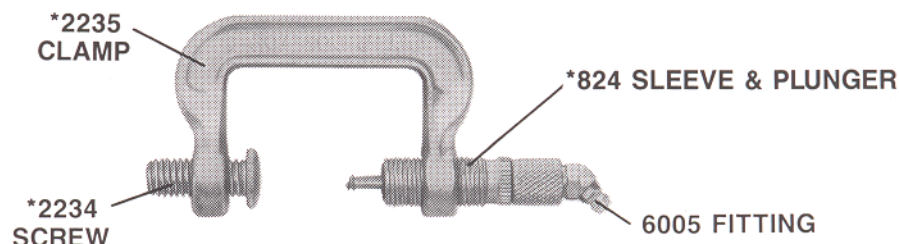


**FIGURE 1**

MODEL 640037 Lubro-clamp with 45° angle fitting and telescoping plunger spiral spring for delivering lubricant between spring and cover lining of enclosed springs.

## 640039 FILTER ASSEMBLY

Clamps to pump primer tube of Series 300 4:1 ratio chassis pumps.

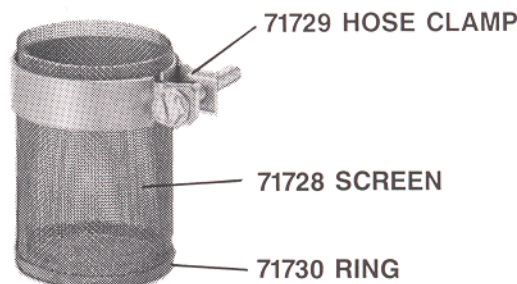

**FIGURE 2**

# 640038 LOW LEVEL CUT-OFF 640153



LOW LEVEL CUT-OFF — Prevents the entry of air into the fluid line by closing the pump intake when material supply is exhausted. Threads to bottom of siphon tube in storage tank. Has 2" NPT(F) threads.

Series 200, 300 325 and 425 Pumps. (Not for pumps that exceed 6 G.P.M.)

