651421-X

**INCLUDING: OPERATION, INSTALLATION & MAINTENANCE** 

RELEASED: REVISED: (REV. A)

7-30-99 2-4-00

# MATERIAL FILTER

**MAXIMUM INLET PRESSURE 6,000 P.S.I. (414 BAR)** 



# READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

#### **SERVICE KITS**

Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life,

Refer to Figure 3 to order replacement parts.

#### MATERIAL FILTER DATA


 MODELS
 651421-()

 MATERIAL
 Carbon steel

MAXIMUM FLUID PRESSURE . . 6,000 p.s.i.g. (414 bar)

#### **OPERATING & SAFETY PRECAUTIONS**

- Read and heed all Warnings, Cautions and Safety Precautions before operating this pump.
- Use only genuine ARO replacement parts to assure compatible pressure rating and longest service life.
- <u>^ CAUTION</u> Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.
- <u>AWARNING</u> DO NOT EXCEED MAXIMUM INLET AIR PRESSURE AS STATED ON AIR MOTOR MODEL PLATE. OPERATING PUMP AT HIGHER PRESSURE MAY CAUSE PUMP DAMAGE.
- <u>MARNING</u> HAZARDOUS MATERIALS. Can cause serious injury or property damage. Do not attempt to return a pump to the factory or service center that contains hazardous material. Safe handling practices must comply with local and national laws and safety code requirements. Obtain Material Safety Data Sheets on all materials from the supplier for proper handling instructions.

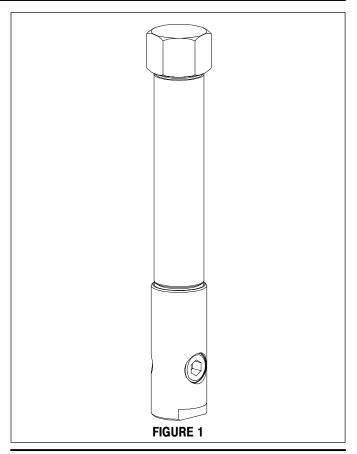

# **MODEL DESCRIPTION CHART**

SCREEN MESH SIZE
70 - 70 Mesh

#### **GENERAL DESCRIPTION**


The ARO Model Material Filter is used to separate foreign materials like dirt, stones and sweeping compound, from the material handling section. Material filters and strainers can be installed in a system to combat

this problem, thereby achieving longer service life. At this point, where the fluid enters the material handing section, the strainer prevents foreign material from entering the system.





## **TYPICAL SYSTEM VIEW**

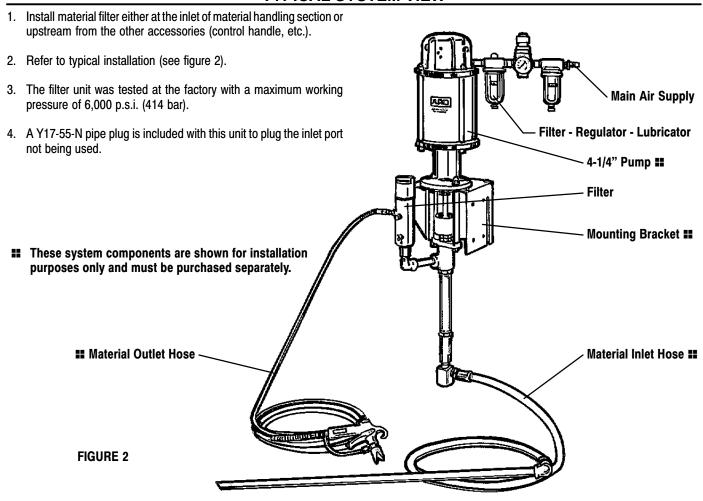

#### **DISASSEMBLY**

<u>WARNING</u> HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.

- Disconnect air supply line and relieve pressure from the system by opening dispensing valve or device and / or carefully and slowly loosening and removing outlet hose or piping from pump.
- 1. Unscrew and remove (1) cap from the (8) tube.
- 2. Remove (2) gasket from (1) cap.
- 3. Remove (3) spring and (4) guide button from the (8) tube.
- 4. Pull the (9) tube, (6) screen assembly and (5) ball from the (8) tube.
- 5. Unscrew the (8) tube from the (7) filter base and remove (2) gasket. Replace worn seals and parts with new parts. Reverse disassembly instructions for reassembly.

## **PARTS LIST**

ITEM	DESCRIPTION (Size in Inches)	QTY	PART NO.	[MTL]
1	Сар	(1)	92990-1	[C]
2	Gasket	(2)	91447	[D]
3	Spring	(1)	90408	[SS]
4	Guide Button	(1)	93949	[SS]
5	Ball (.8125" dia.)	(1)	Y16-126	[SH]
6	Screen Assembly (70 mesh)	(1)	93945-70	[SS]
7	Filter Base	(1)	95025	[C]

ITEM	DESCRIPTION (Size In Inches)	QTY	PART NO.	[MTL]
8	Tube	(1)	92993	[C]
9	Tube	(1)	95024	[C]
10	Pipe Plug (1 - 11-1/2 N.P.T. x 3/4")	(1)	Y17-55-N	[C]
11	Pipe Plug (1/2 - 14 N.P.T. x 9/16")	(1)	Y17-53-N	[C]

#### MATERIAL CODE


[C] = Carbon Steel

[SH] = Hard Stainless Steel

[D] = Acetal

[SS] = Stainless Steel

PAGE 2 OF 4 651421-X

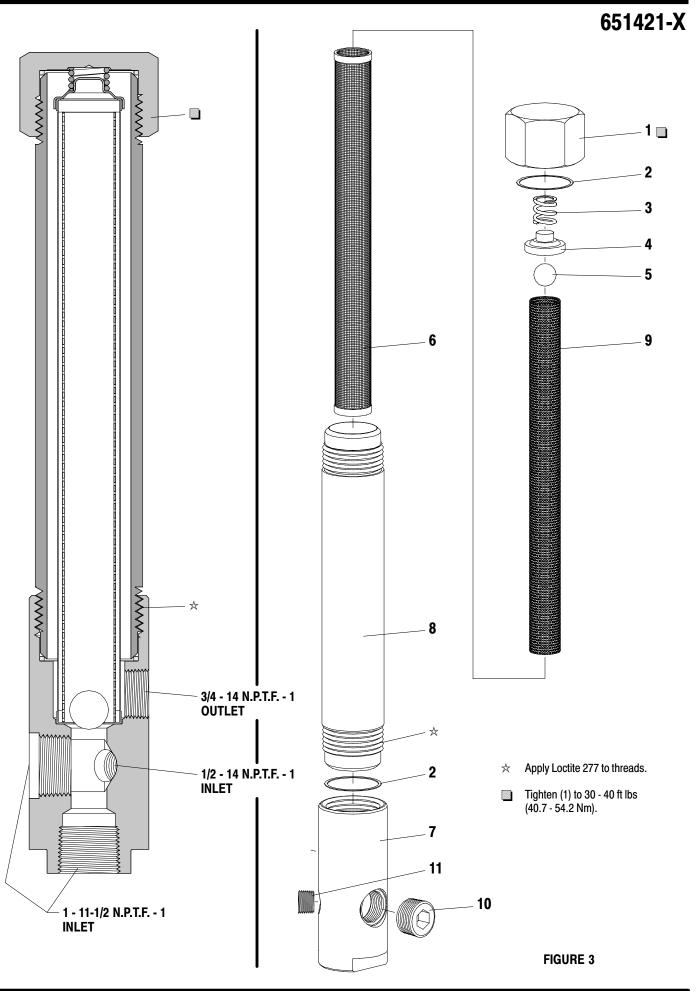

651421-X PAGE 3 OF 4

