
INCLUDING: OPERATION, INSTALLATION & MAINTENANCE ALSO INCLUDE MANUALS: F252XX-X (MODULE-AIR 2000)

RELEASED: 12-28-67 REVISED: 6-27-95 (REV. F) IPP

Model 651727 AIR MANIFOLD ASSEMBLY



READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

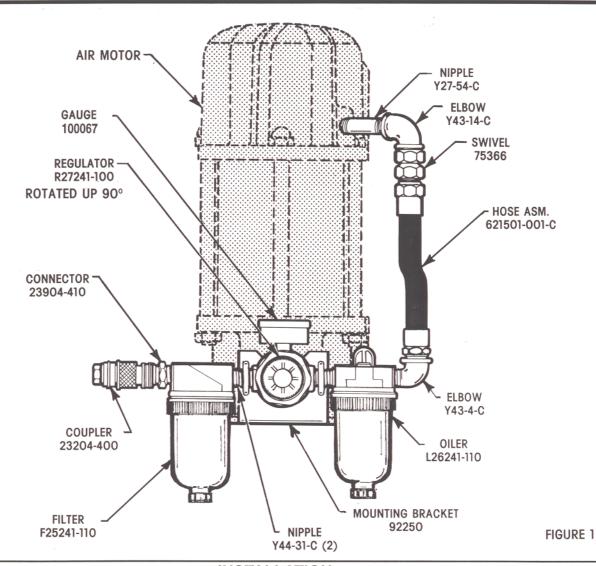

INSTALLATION

- Remove the (4) Bolts, (4) Nuts and (4) Washers on the base of the Air Motor (see figure 2).
- Lift the Pump Assembly enough to allow positioning of 92250 Bracket and 92174 (2) Spacers (see figures 1 and 2).
- 3. Align and install Bolts, Nuts and Washers.

F036

NOTE: Keep in mind that only the regulator is rotated upward 90° for easier viewing of the 100067 gauge.

- Position Filter, Regulator and Lubricator on 92250 Mounting Bracket and secure with 71796 (2) "U" Bolts, Y14–416 (4) Lockwashers and Y12–4–C (4) Nuts (see figure 3).
- Connect the Y27-54-C Nipple and Y43-14-C Elbow to the Air Motor air inlet (see figure 1).
- Connect the 75366 Swivel (and 621501–001–C Hose Assembly) to the Y43–14–C Elbow and complete assembly as shown (see figure 1).



651727 AIR MANIFOLD

