INCLUDING: OPERATION, INSTALLATION AND MAINTENANCE.

INCLUDE MANUALS: Air Line Safety Information (pn 100400-76).

RELEASED: **REVISED:** (REV. K)


2-8-10

65940-X **Air Manifold Assembly**



READ THIS MANUAL CAREFULLY BEFORE INSTALLING, **OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

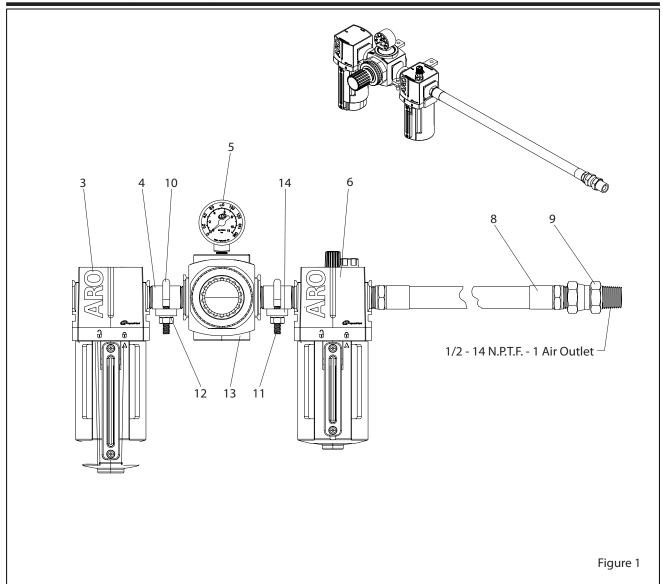

			PAR
Item	Description (size)	(Qty)	Part No.
3	Filter	(1)	F35341-420
4	Nipple (1/2 - 14 N.P.T. x 2")	(2)	Y44-31-C
5	Gauge	(1)	29725
6	Lubricator	(1)	L36341-100
8	Hose (1/2 - 14 N.P.T.F. x 1/2" i.d.)		
	models 65940 (1-1/2 feet long)	(1)	621501-1-F
	models 65940-1 (2 feet long)	(1)	621501-2

RTS LIST							
	Item	Description (size)	(Qty)	Part No.			
	9	Swivel	(1)	75366			
	10	"U" Bolt (1/4" - 20)	(2)	71796			
	11	Nut (1/4" - 20)	(4)	Y12-4-C			
	12	Lock Washer (1/4")	(8)	Y14-416			
	13	Air Regulator	(1)	R37341-100			
	14	Mounting Plate	(2)	90935			
	15	Cap Screw (1/4" - 20 x 5/8") (see figure 3)	(4)	Y6-42-C			

INGERSOLL RAND COMPANY LTD




INSTALLATION


- 1. Position the two (14) mounting plates on the two post lift mounting arm (see figures 2 and 3).
- 2. Using four (15) cap screws and four (12) lock washers, fasten the mounting plates to the four holes located on the top of the mounting arm.
- 3. Place the air manifold assembly on the mounting plates and

secure using two (10) "U" bolts, four (12) lock washers and four (11) nuts (see figures 1 and 2).

NOTE: The regulator is rotated upward 90° for easier viewing of (5) gauge.

- 4. Connect the (8) hose and (9) swivel to the pump air motor inlet.
- 5. Connect 1/2" i.d. air line hose to (3) filter.

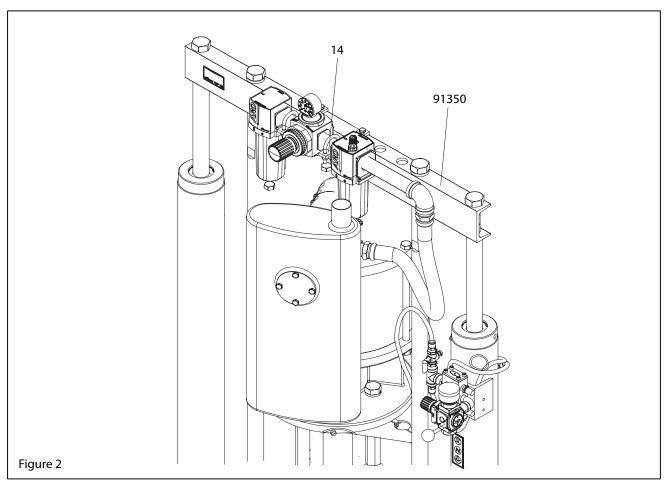

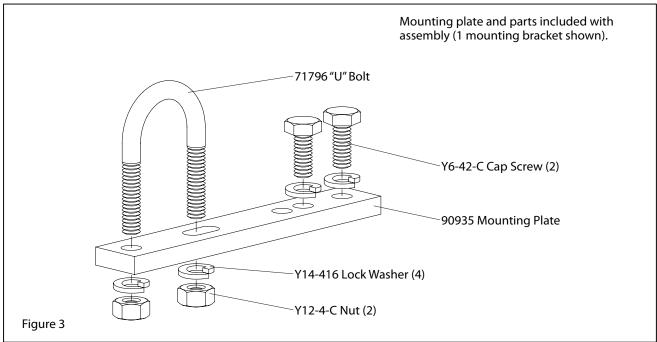



PN 97999-131