

OPERATOR'S MANUAL

650693-X

SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING

INCLUDE MANUALS: 66243-X-B LOWER PUMP END (PN 97999-828) &
S-632 GENERAL INFORMATION MANUAL (PN 97999-624)

RELEASED: 6-1-00

REVISED: 6-2-10

(REV. B)

6" AIR MOTOR

23:1 RATIO

6" STROKE

650693-X43 EXTRUSION PUMP

CARBON STEEL



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,
OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

- Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life.
- 61355 for repair of Air Motor section.**
Service Note: The Air Motor Service / Parts Manual is not shipped with the pump but it is included with each service kit. If this Service / Parts Information is needed, request the Air Motor Operator's Manual from ARO (manual 6564X-X, PN 97999-174).
- 637071-X43-B for repair of Lower Pump section.**
Refer to the chart on page 2 for description of -X43 options.

SPECIFICATIONS

Model Series (Refer to option chart)	650693-X43
Type	Air Operated, Extrusion, Double Acting Pump
Ratio	23:1
Air Motor	65665-B
Motor Repair Kit	61355
Motor Diameter	6" (15.2 cm)
Stroke	6" (15.2 cm)
Air Inlet	1/2 - 14 N.P.T.F. - 1 (f)
Air Exhaust	1-1/4 - 11-1/2 N.P.T.F. - 1 (f)
Lower Pump End Series	66243-X43-B
Lower Pump Repair Kit	637071-X43-B
Material Outlet	1 - 11-1/2 N.P.T.F. - 1 (f)
Weight	67 lbs (30.4 kgs)

PERFORMANCE

Air Inlet Pressure Range	0 - 150 p.s.i. (0 - 10.3 bar)
Fluid Pressure Range	0 - 4215 p.s.i. (0 - 290.7 bar)
Max. Rec'd Cycles / Minute	60
Displacement In³ Per Cycle	12.5
Volume / Cycle	6.9 oz. (204.6 ml)
Cycles Per Gallon	18.5
Flow @ 60 Cycles / Minute	3.2 g.p.m. (12.3 l.p.m.)
Noise Level @ 60 p.s.i. - 40 cpm ①	83.0 db(A) ②

① Tested with 91790 silencer installed.

② The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (L_{Aeq}) to meet the intent of ANSI S1. 13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

PUMP DATA

MODEL 650693-X43

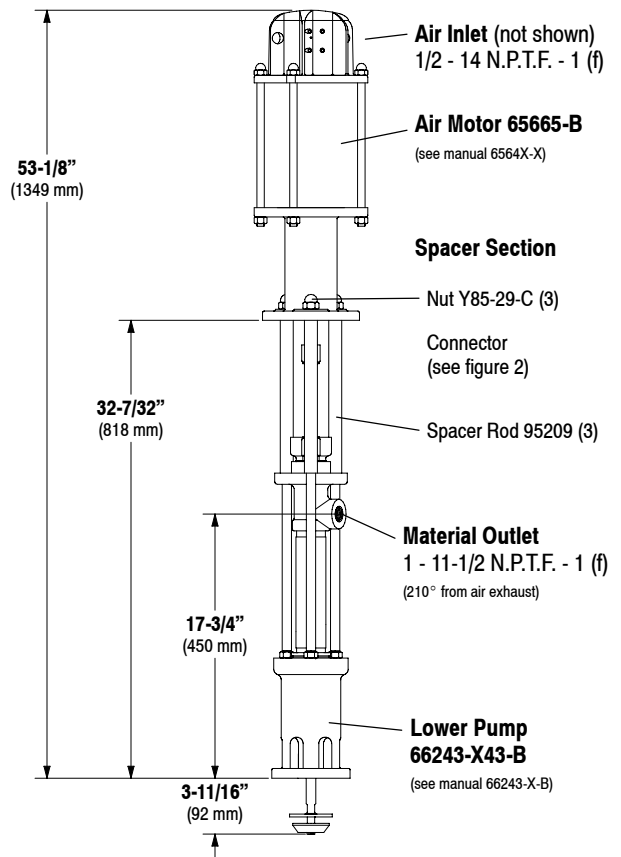


FIGURE 1

Accessories Available: 91790 Silencer, 65138 Floor Mount.

IMPORTANT

This is one of the four documents which support the pump. Replacement copies of these forms are available upon request.

- ☒ 650693-X MODEL OPERATOR'S MANUAL
- ☐ GENERAL INFORMATION - INDUSTRIAL PISTON PUMPS
- ☐ 66243-X-B LOWER PUMP END OPERATOR'S MANUAL
- ☐ 6564X-X AIR MOTOR OPERATOR'S MANUAL

INGERSOLL RAND COMPANY LTD

209 NORTH MAIN STREET - BRYAN, OHIO 43506

① (800) 495-0276 • FAX(800) 892-6276

© 2010

CCN 99890816

www.ingersollrandproducts.com

ARO

IR Ingersoll Rand
Industrial Technologies

PUMP OPTION DESCRIPTION CHART

650693- X 4 3
 PACKING MATERIAL PLUNGER TYPE
 SPRING ARRANGEMENT

PACKING MATERIAL (PACKINGS ARE UPPER AND LOWER UNLESS NOTED)

3 Glass Filled PTFE	P UHMW-PE / PTFE Stag'd (Upper)
C UHMW-PE	UHMW-PE (Lower)
G UHMW-PE / Leather Staggered	R PTFE / UHMW-PE Stag'd (Upper)
	Glass Filled PTFE (Lower)

SPRING ARRANGEMENT

4 Multiple Wave Spring

PLUNGER TYPE

3 HD SS W / HD Chrome Plating

GENERAL DESCRIPTION

⚠ WARNING HAZARDOUS PRESSURE. Do not exceed maximum operating pressure of 4215 p.s.i. (290.7 bar) at 150 p.s.i. (10.3 bar) inlet air pressure.

**PUMP RATIO X
INLET PRESSURE TO PUMP MOTOR = MAXIMUM PUMP
FLUID PRESSURE**

Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 150 p.s.i. (10.3 bar) inlet pressure is supplied to the motor of a 4:1 ratio pump it will develop a maximum of 600 p.s.i. (41.4 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

⚠ WARNING Refer to general information sheet for additional safety precautions and important information.

- The Chop - Check pumps are primarily designed for the pumping of heavy viscous material with or without fibrous content. The models can be used with a gravity feed single post lift as a topper type assembly or with a two post lift as a force feed type assembly. The lower pump is designed for easy priming and the double acting feature is standard in all ARO industrial pumps. Material is delivered to the pump discharge outlet on both the up and down stroke.
- The motor is connected to the lower pump end by a spacer section. This allows for lubrication of the upper packing gland and prevents motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is adequately filled with lubricant to protect the upper packings and insure longest service life.

TROUBLE SHOOTING

Pump problems can occur in either the Air Motor Section or the Lower Pump End Section. Use these basic guidelines to help determine which section is affected.

If the pump will not cycle.

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet / outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet / outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and / or air leaks from the air motor.

If the pump cycles but does not deliver material.

- Refer to the lower pump end manual for further trouble shooting.

PUMP CONNECTION - UPPER / LOWER

NOTE: All threads are right hand.

- Lay the pump assembly on a workbench.
- Remove the three nuts from the three spacer rods (figure 1).
- Pull the air motor from the lower pump end until motor piston rod is in the "down" position and lower pump end rod is in "up" position.
- Using e-ring pliers, slide the retaining ring up far enough to allow the sleeve to move upward and release the two connectors (figure 2). Lay the air motor aside.
- Repeat step 4 to remove the other connector, then remove the extension rod.
- Unscrew the three 95209 spacer rods only if disassembly of the lower pump end is necessary.

PUMP CONNECTOR DETAIL

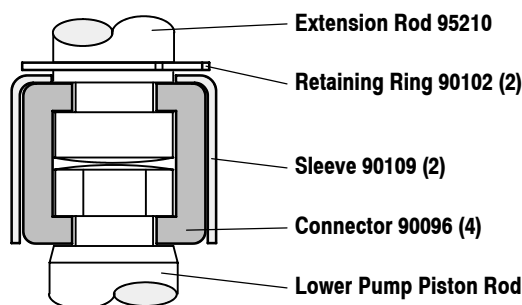


FIGURE 2

REASSEMBLY

- Align the lower pump end with the extension rod and the air motor piston rod. NOTE: Position the air inlet of the air motor 65° from the material outlet.
- Install the two connectors and retain with the sleeve, slide the retaining ring back into position. Repeat this step for the other connector also.
- Reinstall the spacer rods to the lower pump end and torque evenly to 60 - 90 ft lbs (81.4 - 122.0 Nm).
- Bring the motor and lower pump together and retain with the three nuts.