


INSTALLATION

RELEASED: 8-15-97

REVISED:

PN: 119999-64

EASYWIRE HARDWIRE PINOUT (Male Receptacle on Valve Shown)

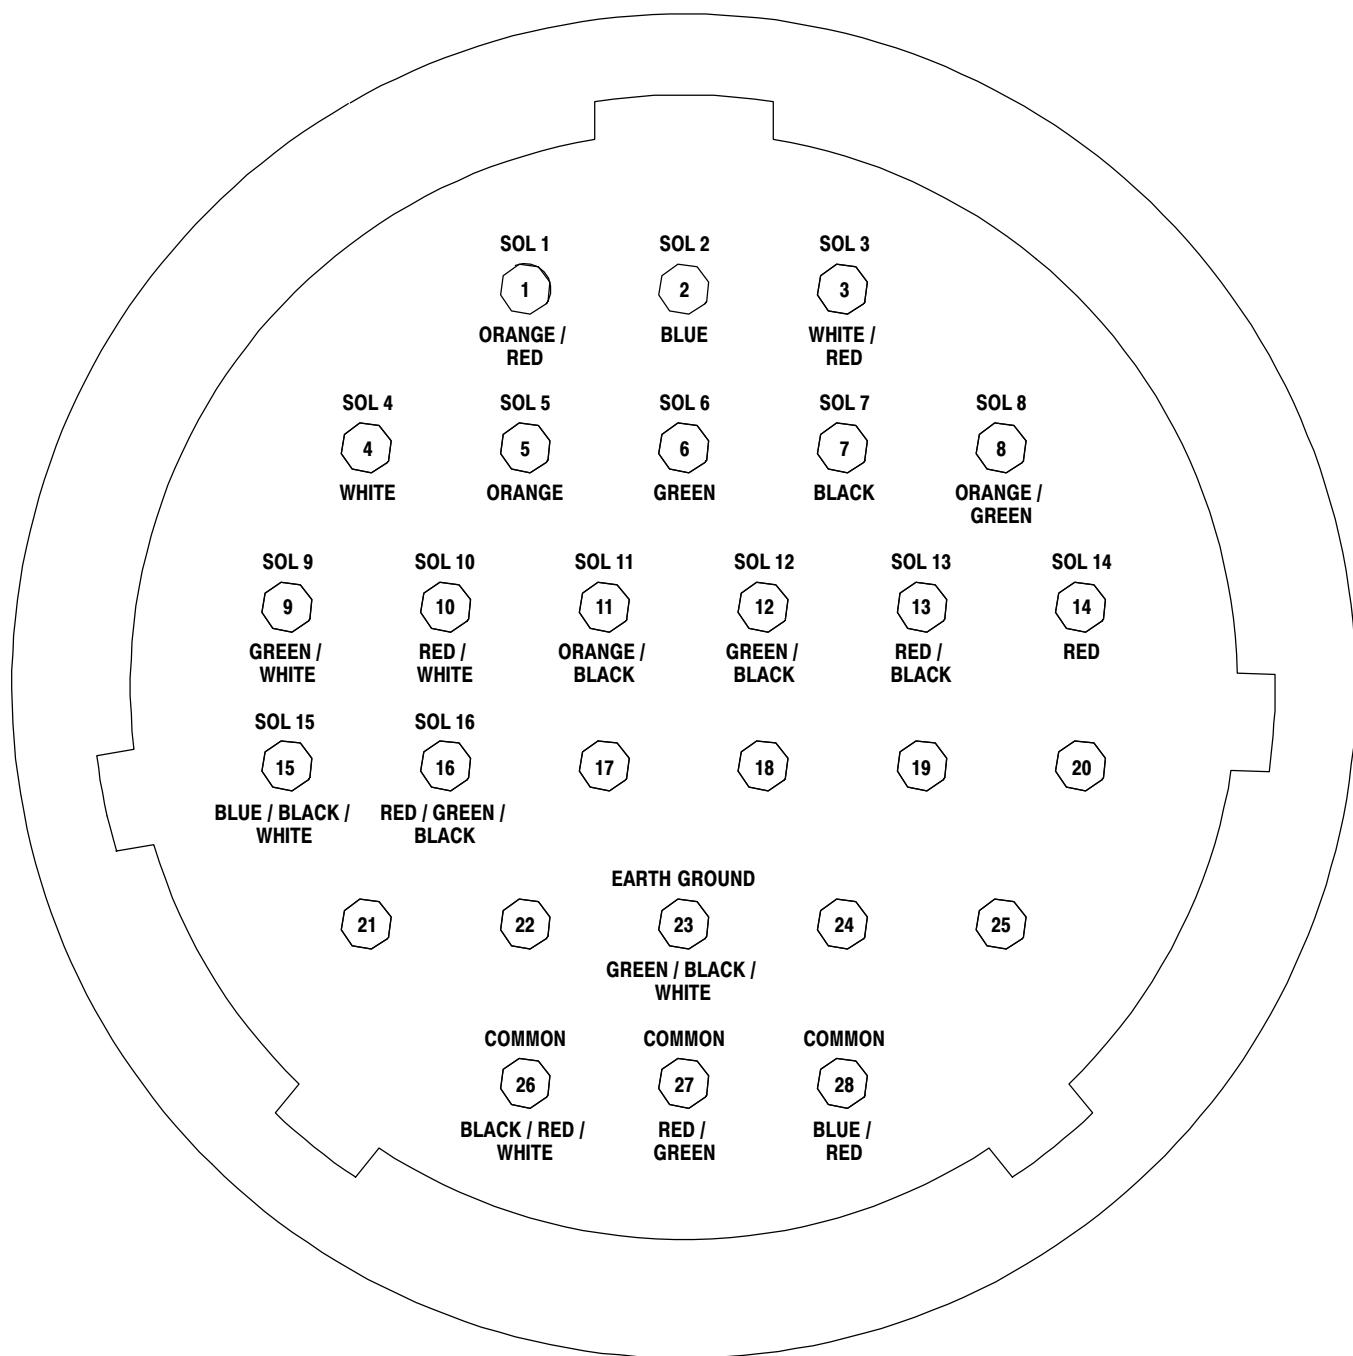

Commons to be connected to 0 VDC (or neutral in AC) at all times.

24 V (or 120 VAC) across pins 1 thru 16 will activate its corresponding solenoid.


AROTM

INGERSOLL-RAND COMPANY
ONE ARO CENTER • BRYAN, OHIO 43506-0151
© (419) 636-4242 • FAX (419) 633-1674

©1997 • PRINTED IN U.S.A.

INGERSOLL-RAND
FLUID PRODUCTS

INTERNAL WIRING INSTRUCTIONS

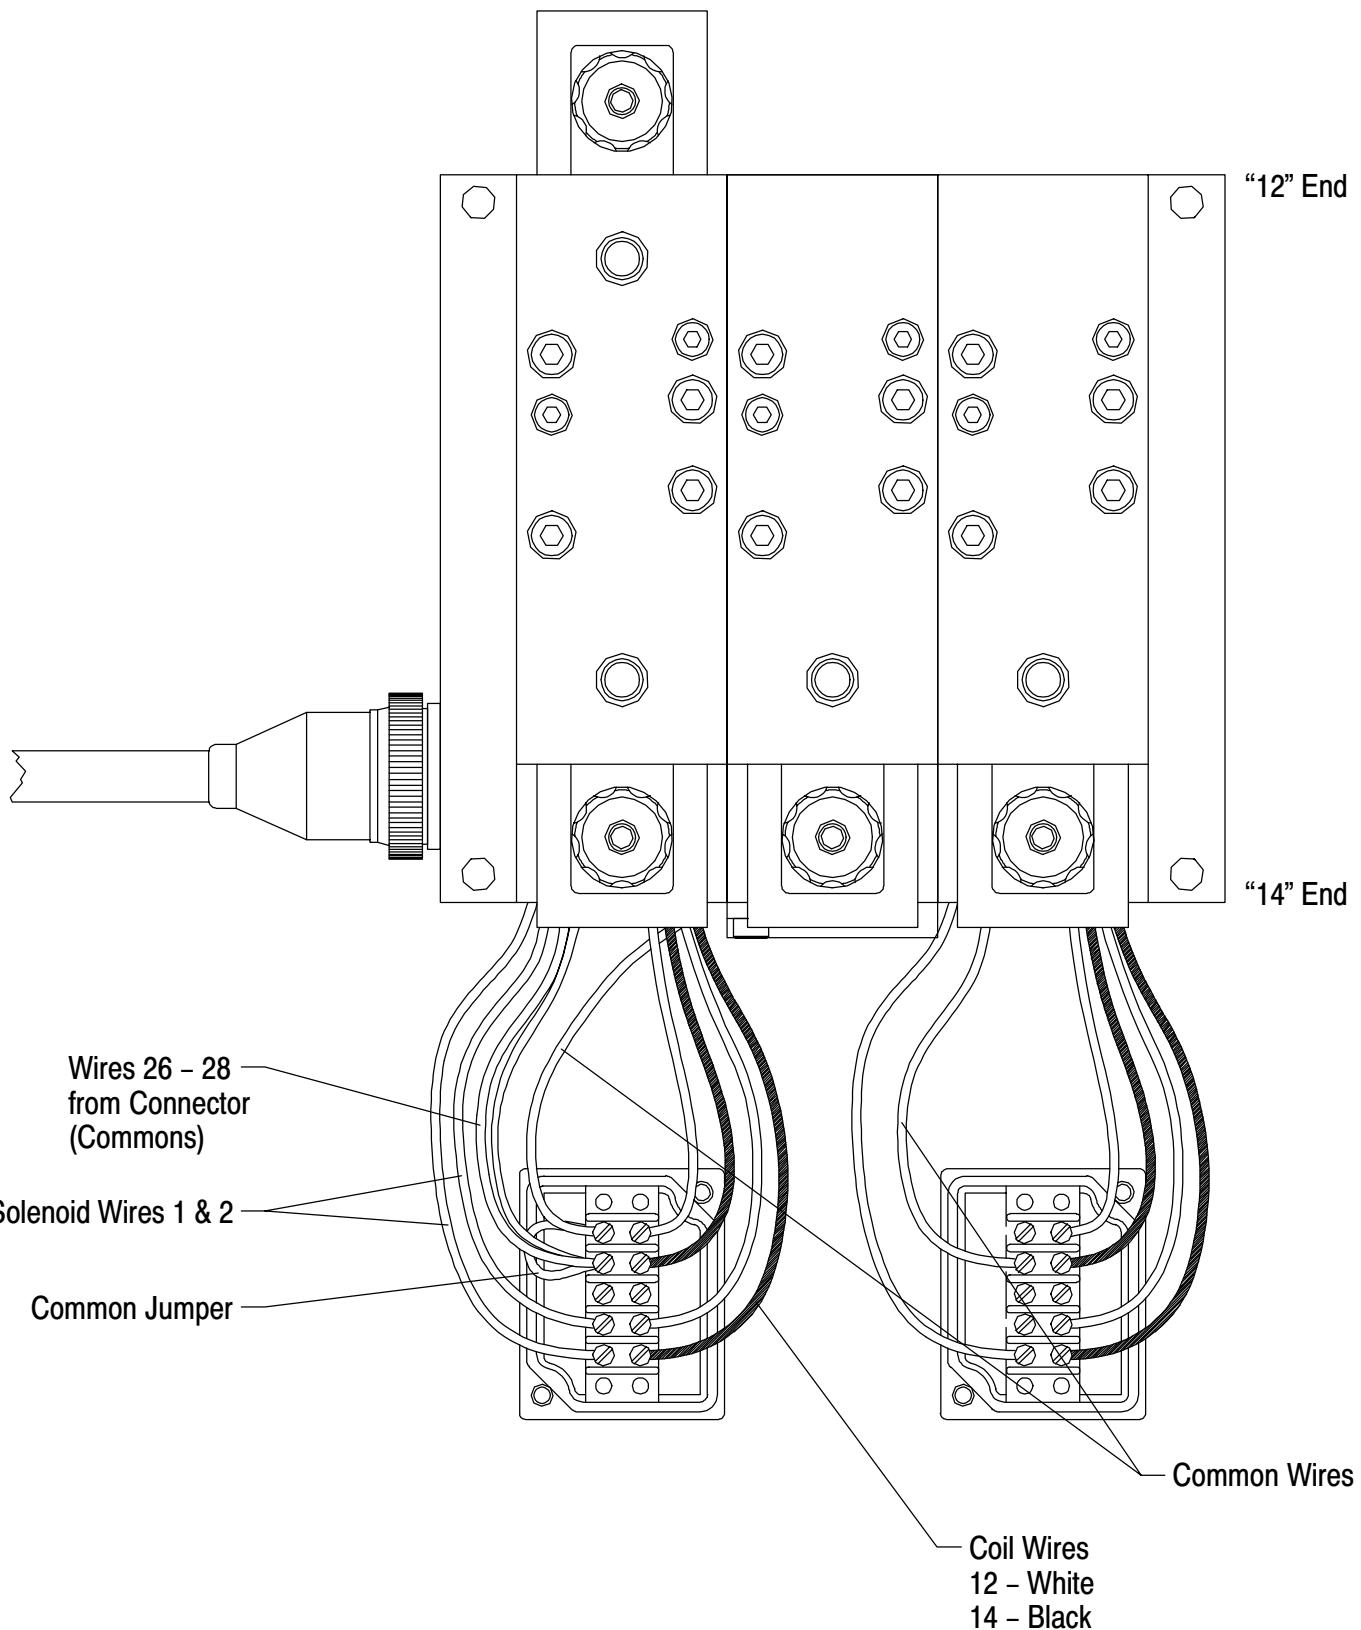

1. Install common jumpers to all double solenoid valve manifolds, as shown above.
2. Install common wires between every manifold, as shown above.
3. Attach common wires #26 - 28 from the connector to the first station.
4. Attach one solenoid wire from the connector to each coil wire, as shown above.