
**REVISED:** (REV. 01)

# 67363 1 - 11-1/2 N.P.T. COOL AIR KIT

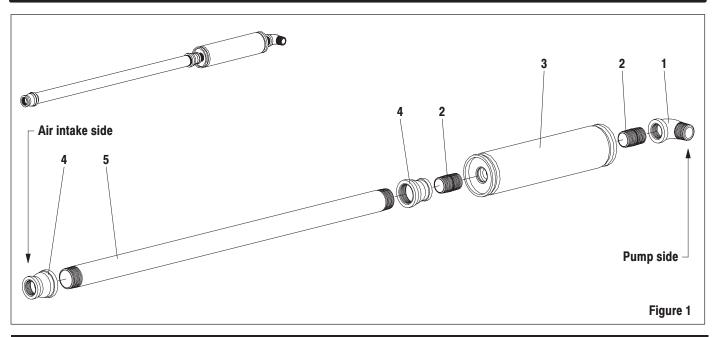

| PARTS LIST |  |     |          |  |      |   |     |          |
|------------|--|-----|----------|--|------|---|-----|----------|
| Item       | Description (size)                     | Qty | Part No. |  | Item | Description (size)                              | Qty | Part No. |
| 1          | 90° Street Elbow (1 - 11-1/2 N.P.T.)   | (1) | Y43-6-C  |  | 4    | <b>Reducing</b> (1-1/4 - 11-1/2 N.P.T. female x | (2) | Y202-7   |
| 2          | Nipple, Short (1 - 11-1/2 N.P.T. x 2") | (2) | Y27-56-C |  |      | 1 - 11-1/2 N.P.T. female)                       |     |          |
| 3          | Silencer (1 - 11-1/2 N.P.T., female)   | (1) | 32323552 |  | 5    | <b>Pipe</b> (1-1/4 - 11-1/2 N.P.T. x 36")       | (1) | 15237845 |

### OPERATING AND SAFETY PRECAUTIONS

**WARNING** = Hazards or unsafe practices which could result in severe personal injury, death or substantial property damage.

**CAUTION** = Hazards or unsafe practices which could result in minor personal injury, product or property damage.

# NOTICE

= Important installation, operation or maintenance information.

**WARNING** EXCESSIVE INLET AIR PRESSURE. Do not exceed the maximum material pressure of any component in the system.

**WARNING** HAZARDOUS PRESSURE. Can result in serious injury or property damage. Do not service or clean pump, hoses or dispensing valve while the system is pressurized.

**CAUTION** Be certain all operators of this equipment have been trained for safe working practices, understand it's limitations, and wear safety goggles / equipment when required.

PN 97999-1149

# **INSTALLATION**

- 1. Disconnect all power supplies to the pump.
- 2. Remove the air inlet filter and set aside.
- 3. Connect the piping to the motor inlet (as shown). In most cases, a pipe sealant should be used on thread connections. Tighten all fittings.
- Reattach the air inlet filter. NOTICE: Failure to reattach the air inlet filter will void any warranty.
- Reconnect all power supplies to the pump.

### **SERVICE**

- USE ONLY GENUINE IR® REPLACEMENT PARTS TO ASSURE PERFORMANCE AND PRESSURE RATING.
- Repairs should be made only by authorized trained personnel. Contact your local authorized IR Service Center for parts and customer service information.

