



Application Services (866) 284-5509

## Technical Bulletin AS 070105 JM


### AutoStream PC Controllers and Components

#### Description:


The AutoStream PC has used several different types of PC in the past. This bulletin shows how to differentiate these.

#### Components:

Each PC could have a Touchscreen, Hard Drive Drawer, Software Key, and DeviceNet Card(s) installed.

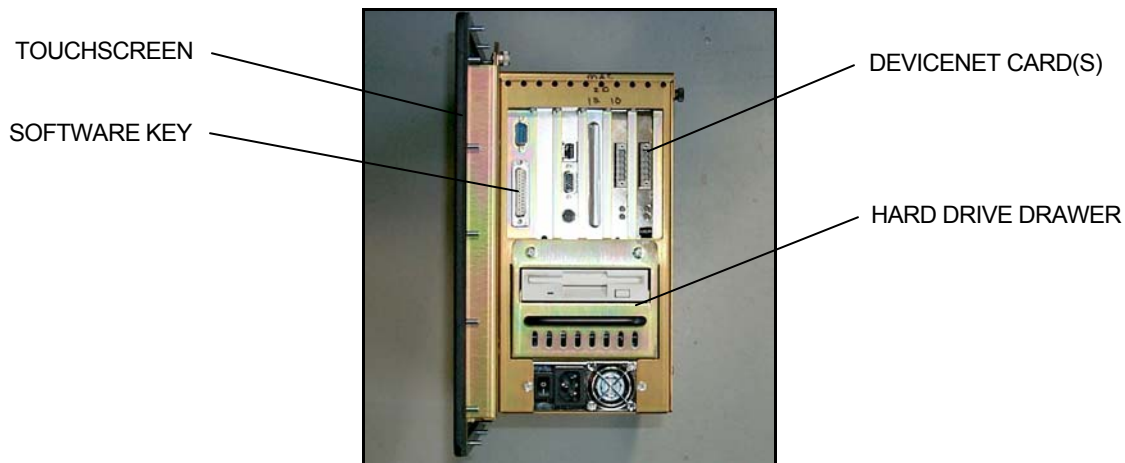

There are three (3) different kinds of DeviceNet cards:

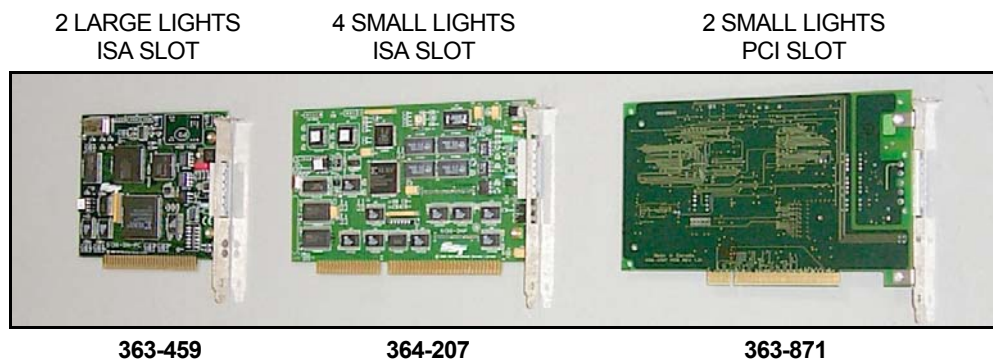

There are FIVE (5) different kinds of computers:


### 363-209 and 363-554 Cutler-Hammer Computers



If the Cutler-Hammer label on the left hand side ends with an “X”, it is a **363-554**, otherwise it is a **363-209**. These computers are identical except for a retentive memory board that is installed on the motherboard. Because of this, they can not run all the same versions of AutoStream software.

For software versions before **3.00**, software versions with an “A” on the end are for the **363-554**, otherwise they are for the **363-209**.

**3.00** and newer software can run on either PC, but it is recommended that the memory be upgraded to **128Mb**.

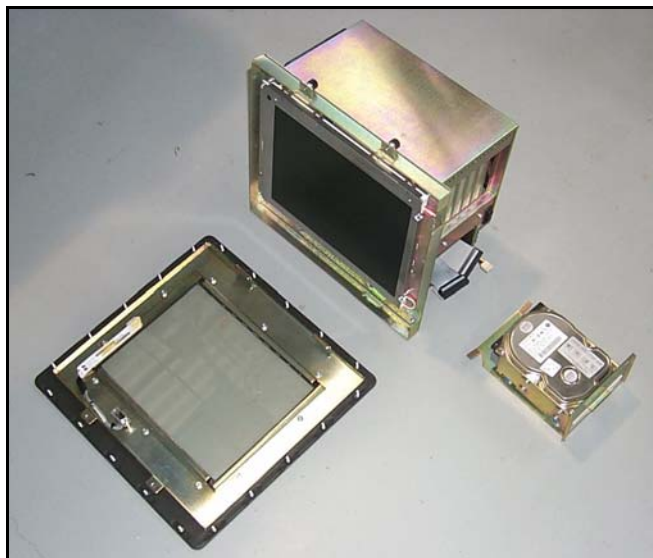


Shown with Touchscreen and Hard Drive Drawer removed.




Uses **363-556** Hard Drive Drawer.

### 363-832 Cutler-Hammer Computers

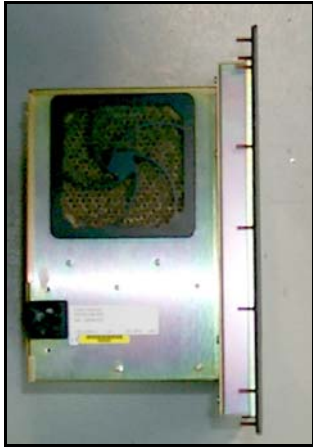

The **363-832** Computer uses both an ISA and a PCI DeviceNet card, while all the other PC's use only ISA cards.

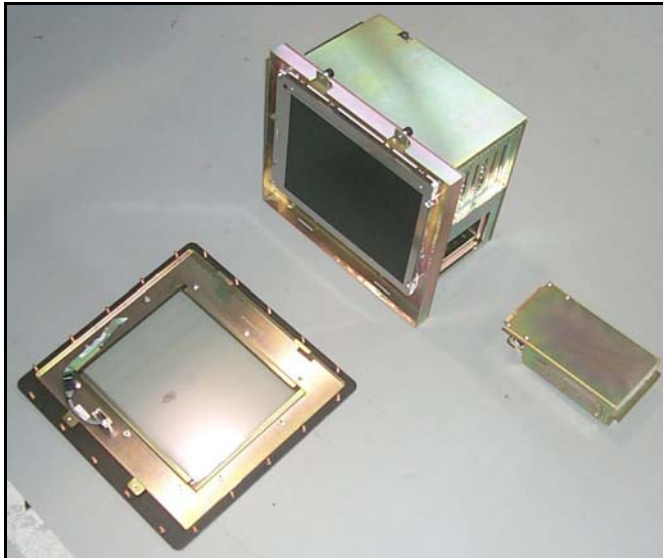

Shown with Touchscreen and Hard Drive Drawer removed.



Uses **364-183** Hard Drive Drawer.

## Cutler-Hammer Inverters

The Inverter lights up the LCD Screen. When it blows out, the screen will remain dark even though the PC is running. Cutler-Hammer PC's use 2 different kinds of inverters that are not interchangeable.

Older Cutler-Hammer PC's with the "ELO" Touchscreen use the **364-232** Inverter:




Newer Cutler-Hammer PC's with the "3M" Touchscreen use the **364-231** Inverter:



## 364-003 and 364-468 Dynics Computers



The **364-003** and **364-468** Computers are mechanically and electrically identical. The only difference is that a **364-003** operates on **Windows NT4 SP3** and a **364-468** operates on **Windows 2000**.

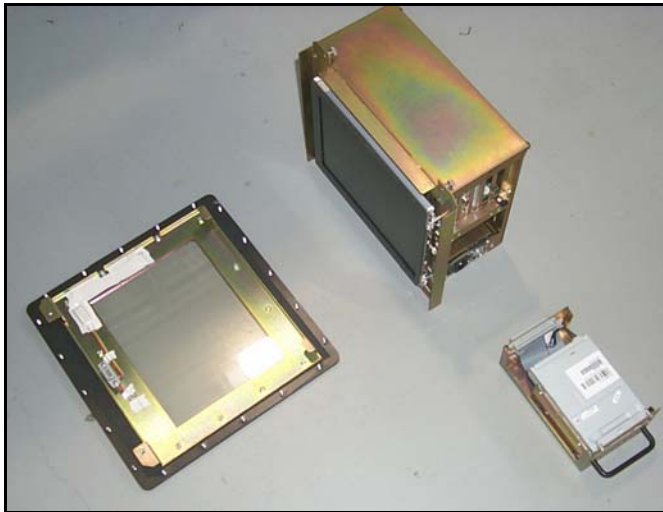

Shown with Touchscreen and Hard Drive Drawer removed.



Uses **364-114** Hard Drive Drawer.



## Dynics Inverters

The Inverter lights up the LCD Screen. When it blows out, the screen will remain dark even though the PC is running. Dynics PC's use 3 different kinds of inverters that are not interchangeable.

The **364-746** Inverter says "LXM1620" and looks like this:



The **364-747** Inverter says "LS520" and looks like this:



The **364-748** Inverter says "ERG" and "N10176" and looks like this:

