

Problem:

- A) It is difficult to change balancer size or control handle type from the screen.
- B) It is difficult reaching the screen to tare the load and end-effector.

Solution:


Upgrade the Intelift to version 2.15. This version provides an expanded menu for configuration selection and the ability to tare by remote from the handle, without touching the control enclosure.

Procedure:

- 1) Remove the two screws from the top sides of the Intelift Control Enclosure and let the enclosure fold down.




- 2) Remove the Daughter Board by the two screws shown.

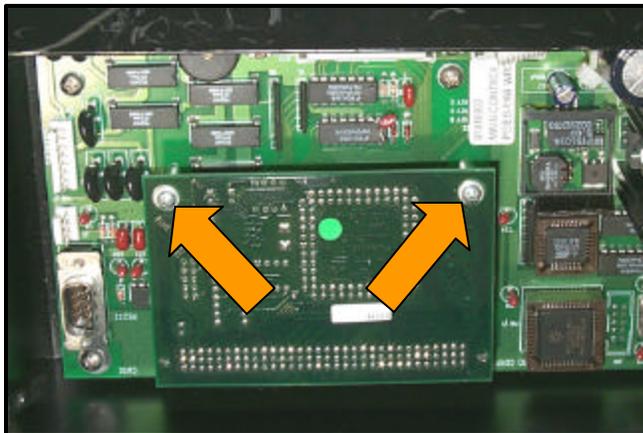


- 3) Attach an anti-static strap to your wrist and ground it securely.


- Place the Daughter Board on an antistatic surface such as the shipping bag and remove the Program Chip using a Chip Extractor

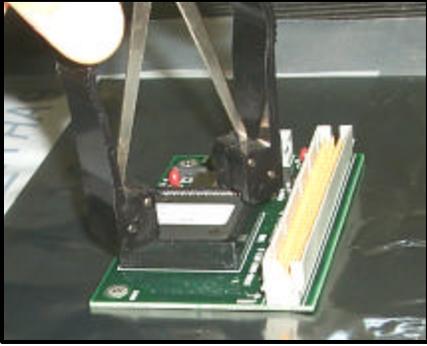

- Aligned the beveled corner of the new Program Chip with the beveled corner of the socket.

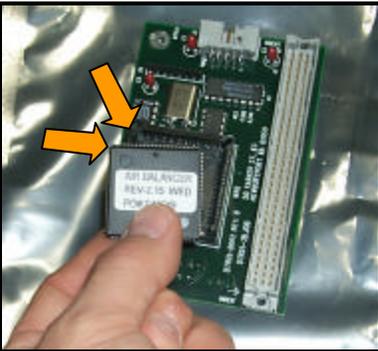

- Press firmly on the chip to make sure it is installed fully into the socket.

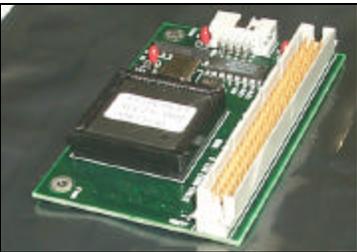

- Install Daughter Board back into the Intelift Controller
- Rotate the Intelift Control Enclosure back into position and install two screws.

Operating the Remote Tare:

When this "Handle Set-Up" mode is active, the Power LED on the handle will be off, the Intelift LED on the handle will be flashing, and the Low Speed LED on the handle will be flashing.

- With Power OFF  , hold in the Speed  and Intelift  Buttons
- Turn power ON  , and release the switches after 1 or 2 seconds (LED's will flash)
- Push and release the Intelift  Button (this takes the tare)
- Cycle power off and on, and use normally.