

BALL VALVE SHUT-OFF PARTS LIST for AIR WINCHES

This instruction sheet provides information for the ball valve shut-off parts. Use this sheet in conjunction with Air Winch Parts, Operation and Maintenance Manuals and K5C2 Control Valve supplement manual MHD56213.

INSTALLATION INSTRUCTIONS


General Instructions

Refer to Dwg. MHP2459.

Winch and control valve kits are supplied with ball valve and nipple intended to provide secondary air shut off.

Install ball valve in inlet line or port of control valve and within easy range of operator. Advise operators and support personnel of its location and use.

Ball Valve Shut-Off

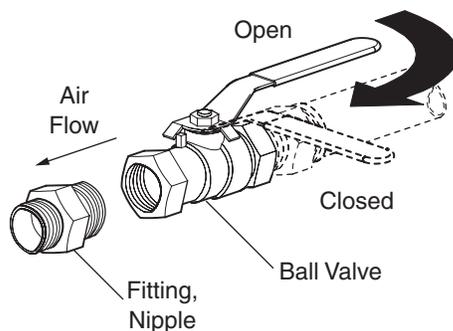

(Dwg. MHP2459)

BU7A All Models (1/2 in NPT)

Description of part	Part Number
Fitting, Nipple	71056428
Ball Valve	71404602

EU, EUL, EUAB, EURC and EURCAB (3/4 in NPT)

Description of part	Part Number
Fitting, Nipple	71404636
Ball Valve	71404610

EUAB/PT and FA2 Pilot Control (1 in NPT)

Description of part	Part Number
Fitting, Nipple	50933
Ball Valve	71416903

FA2, FA5, FA7, FA10, FA2.5A and FA5A Full Flow and FA2.5 FA2B All Models and K5C2-SBK, K5C2-SBK-X Control Valve Kits (1-1/4 in NPT)

Description of part	Part Number
Fitting, Nipple	51704
Ball Valve	71404628

FA2.5A, FA5A, FA5, FA7 and FA10 Pilot Control (1-1/2 in NPT)

Description of part	Part Number
Fitting, Nipple	71416911
Ball Valve	71311252

Form MHD56261

Edition 2

January 2003

71405666

© 2003 Ingersoll-Rand Company



United States Office Locations

For Order Entry, Order Status and Technical Support:

Ingersoll-Rand

P.O. Box 24046
2724 Sixth Avenue South
Seattle, WA 98124-0046
Phone: (866) 273-FAST(3278)
Fax: (206) 624-6265

Web Site:

www.airwinch.com

International Office Locations

Offices and distributors in principal cities throughout the world. Contact the nearest **Ingersoll-Rand** office for the name and address of the distributor in your country or write/fax to:

Canada

National Sales Office Regional Warehouse Toronto, Ontario

51 Worcester Road
Rexdale, Ontario
M9W 4K2
Phone: (416) 213-4500
Fax: (416) 213-4510
Order Desk
Fax: (416) 213-4506

Latin America Operations

Ingersoll-Rand
730 N.W. 107 Avenue
Suite 300, Miami, FL, USA
33172-3107
Phone: (305) 559-0500
Fax: (305) 222-0864

Europe, Middle East and Africa

Ingersoll-Rand Douai Operations

111, avenue Roger Salengro
59450 Sin Le Noble, France
Phone: (33) 3-27-93-08-08
Fax: (33) 3-27-93-08-00

Asia Pacific Operations

Ingersoll-Rand Ltd.

42 Benoi Road
Jurong, Singapore 629903
Phone: 65-861-1555
Fax: 65-861-0317

Russia

Ingersoll-Rand Co.

Presnensky Val, 19
Moscow 123557 Russia
Phone: 7-095-933-03-24
Fax: 7-095-737-01-48

Australia

Ingersoll-Rand Ltd.

Landmark Corporate Centre
Level 2 454-472 Nepean Hwy.
Frankston, Vic 3199
Australia
Phone: 61 3 8781 1600
Fax: 61 3 8781 1611