


## D040 Cordless Drill Exploded Diagram

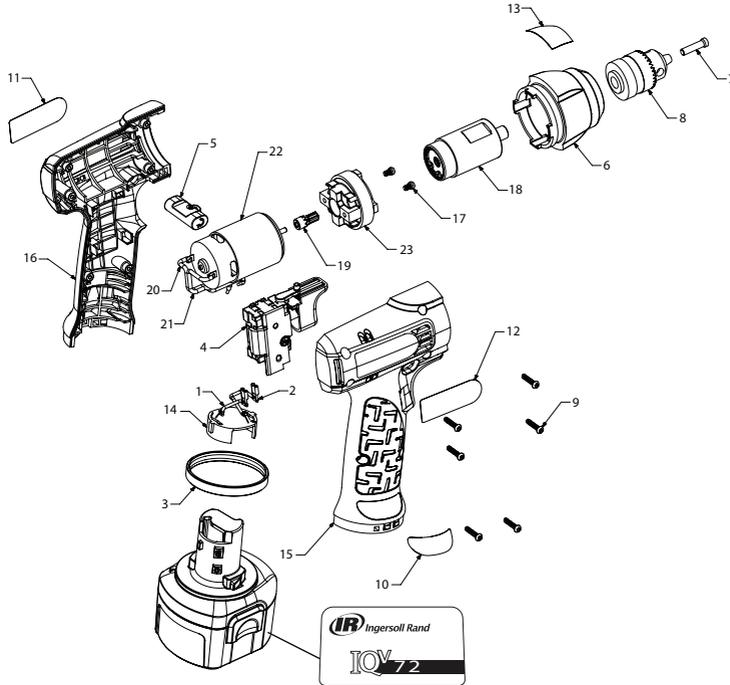

(Dwg. 45538204)

### D040 Cordless Drill Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
*	Battery Connector Kit	W040-K56	*	Label Kit	D040-K99
1	Wire, Negative Switch	--	10	Voltage Label	--
2	Wire, Positive Switch	--	11	Nameplate	--
14	Battery Connector	--	12	Info Label	--
*	Housing Ring Kit	W040-K339	13	Warning Label	--
3	Housing Ring	--	*	Housing Kit	D040-K40
*	Trigger Kit	W040-K93	9	Screw, Housing (6 Required)	--
4	Trigger Assembly	--	10	Voltage Label	--
*	Forward/Reverse Actuator Kit	W040-K75	11	Nameplate	--
5	Forward/Reverse Actuator	--	12	Info Label	--
*	Hammer Case Kit	D040-K727	15	Right Housing	--
6	Hammer Case	--	16	Left Housing	--
13	Warning Label	--	*	Gear Kit	D040-K37
*	Chuck Key Kit	D040-K253	7	Screw, Chuck	--
*	Chuck, Key	--	18	Gear Module	--
*	Chuck Kit	D040-K255	*	Electric Motor Kit	D040-K54
8	Chuck	--	19	Pinion	--
*	Chuck, Key	--	20	Wire, Negative Motor	--
*	Fastener Kit	W040-K105	21	Wire, Positive Motor	--
9	Screw, Housing (6 Required)	--	22	DC Motor	--

\* Not Illustrated

---

## **Parts and Maintenance**

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

---

## **Related Documentation**

For additional information refer to:

Cordless Drill Product Safety Information Manual 04581153.

Cordless Drill Product Information Manual 80226897.

Manuals can be downloaded from [www.irtools.com](http://www.irtools.com).