

The PFS-KEY-RESETL will disable an Insight Controller after a failed cycle until the key is inserted and turned. The Insight will also be disabled if this reset box is removed.



## Pinout

Using the PFS-19P-10 cable, connect to the Insight IC I/O blocks as follows:

Wire Color	I/O
RED	+24VDC
BLACK	0VDC
ORANGE	REJECT
GREEN	ENABLE
BLUE	DISABLE

Make sure that each I/O header has power and common (0VDC).

## Operation

The Insight will operate until a failed cycle occurs, where it will disable the tool. Follow these steps to reset the system:

- 1) Insert key and rotate to the right
- 2) Run a good cycle (while holding the key to the right)
- 3) Remove key

## Caution

Do not operate the tool trigger while the key is turning. This could cause the controller to stop working and it will require a reboot.