

## Description:


This procedure shows how to set up LeechFTP for Ethernet FTP (File Transfer Protocol) communication with the Ingersoll-Rand Insight IC. LeechFTP may be used to view, move, or copy files on the IC as well as upgrade the Insight IC software.

## Setup Procedure:

1. Double-click on the "leechFTP.zip" file.
2. Double-click on "Setup.exe". A box will appear saying that it will use a temporary folder for setup. Choose "OK".
3. Choose "Next" twice and then choose "Finished".
4. Double-click the "LeechFTP" icon on your desktop.




5. Click the "Shows Bookmarks" icon in LeechFTP:
6. Choose "Edit" then "Add Folder". Name the new folder "IC".
7. Select the new "IC" folder and choose "Edit" and "Add Bookmark".
8. Enter "**192.168.4.2**" for the "Host or URL" and "**guest**" for both the "Username" and "Password" and click "OK" when finished. Close the "Bookmarks" box.

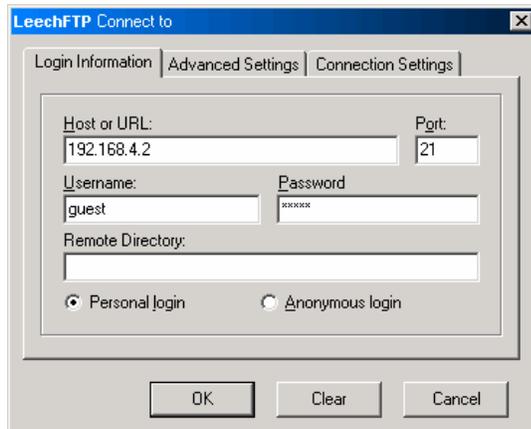

9. Under the "Threads" tab, set the "max threads" to "2" instead of "5".



## Operating Procedure

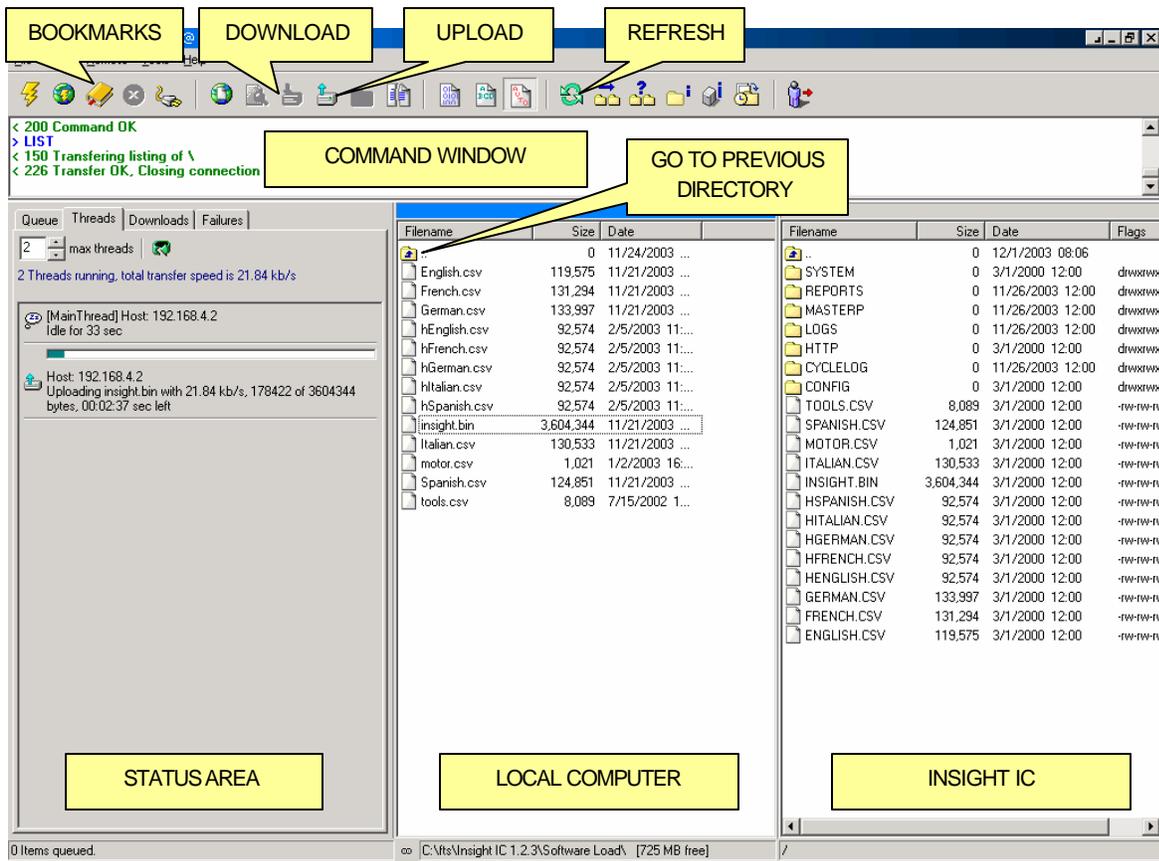

### Uploading Files to the IC:

1. Connect to the IC using the bookmark for address 192.168.4.2
2. When the green writing "Transfer OK, Closing connection" appears, the computer has connected to the IC.
3. Highlight the file in the center panel that you want to upload. To select multiple files, highlight the top file, push the "Shift" key and the down arrow key until all the correct files are selected.
4. Make sure that the directory on the IC is the correct destination directory.
5. Click on the "Upload" key.

Note: If the file does not seem to be transferring, go to the "Queue" tab and make sure the system is not on

Sleep mode by checking the  icon. If it looks like , then the system is asleep. Click once to wake.

### Downloading Files from the IC:

1. Connect to the IC.
2. Highlight the file in the right panel that you want to upload.
3. Make sure that the directory on the computer is the correct destination directory and Click "Upload".

Note: Press Ctrl-D and type "/" to go back to the Insight IC root directory.

**See AS 112503 JM for Software Load Instructions**