

REPAIR PART LISTING for MODELS TMAD1 AND TMAD2 ANGLE WRENCH CONTROLLER CABINETS for DC ELECTRIC TORQUE MANAGEMENT SYSTEMS

NOTICE

SAVE THESE INSTRUCTIONS. DO NOT DESTROY.

⚠ WARNING

READ ALL INSTRUCTIONS BEFORE OPERATING THIS UNIT.

Electrical repairs should be attempted only by authorized trained repair person. Consult your service center listing for your nearest Ingersoll-Rand authorized service center.


For safe operation, the following procedure must be followed:

1. **Keep work area clean.**
Cluttered areas and benches invite injuries.
2. **Consider work area environment.**
Don't expose the Controller to water.
Keep the work area well lighted.
3. **Guard against electric shock.**
Prevent body contact with grounded surfaces, such as pipes, metal structures or other electrical products.
4. **Keep bystanders away.**
Do not permit unauthorized personnel to operate this Controller.
5. **Store idle tools.**
When not in use, the Controller should be stored in a dry and secured area.
6. **Don't abuse the cord.**
Never carry a Controller by its cord or yank the cord of the Controller to disconnect it from a receptacle.
Keep the cord away from heat, oil, solvent and sharp edges.
7. **Maintain Controller with care.**
Inspect Controller cord periodically and if damaged, have it repaired by an authorized service facility.

⚠ WARNING

GROUNDING INSTRUCTIONS

The Controller should be grounded while in use to protect the operator from electric shock. The Controller is equipped with a three-conductor cord and three-prong grounding-type plug to fit the proper grounding-type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire. Never connect the green (or green and yellow) wire to a live terminal. Your unit is to be used on a 115 VAC, 60Hz, three prong outlet as shown. **DO NOT** use the unit with a two prong plug outlet and an adapter. Always check that your ground is operating properly on the outlet by a qualified electrician before using the unit.

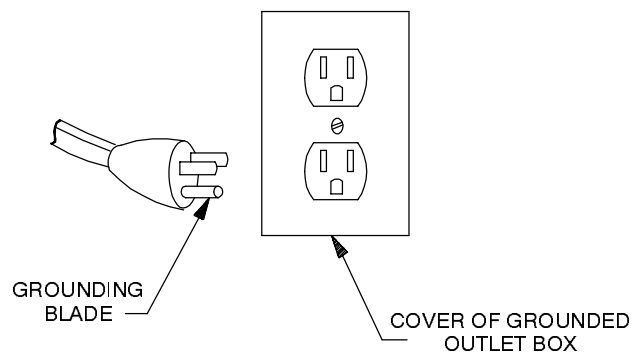

(Dwg. TPD1501)

⚠ WARNING


Use only three-wire extension cords that have three-prong grounding-type plugs and three-pole receptacles that accept the Controller's plug. Replace or repair damaged cords.

The use of other than genuine Ingersoll-Rand replacement parts may result in decreased tool performance and increased maintenance, and may invalidate all warranties.



INGERSOLL-RAND®

PROFESSIONAL TOOLS

TMAD1-001 SINGLE WRENCH CABINET ASSEMBLY

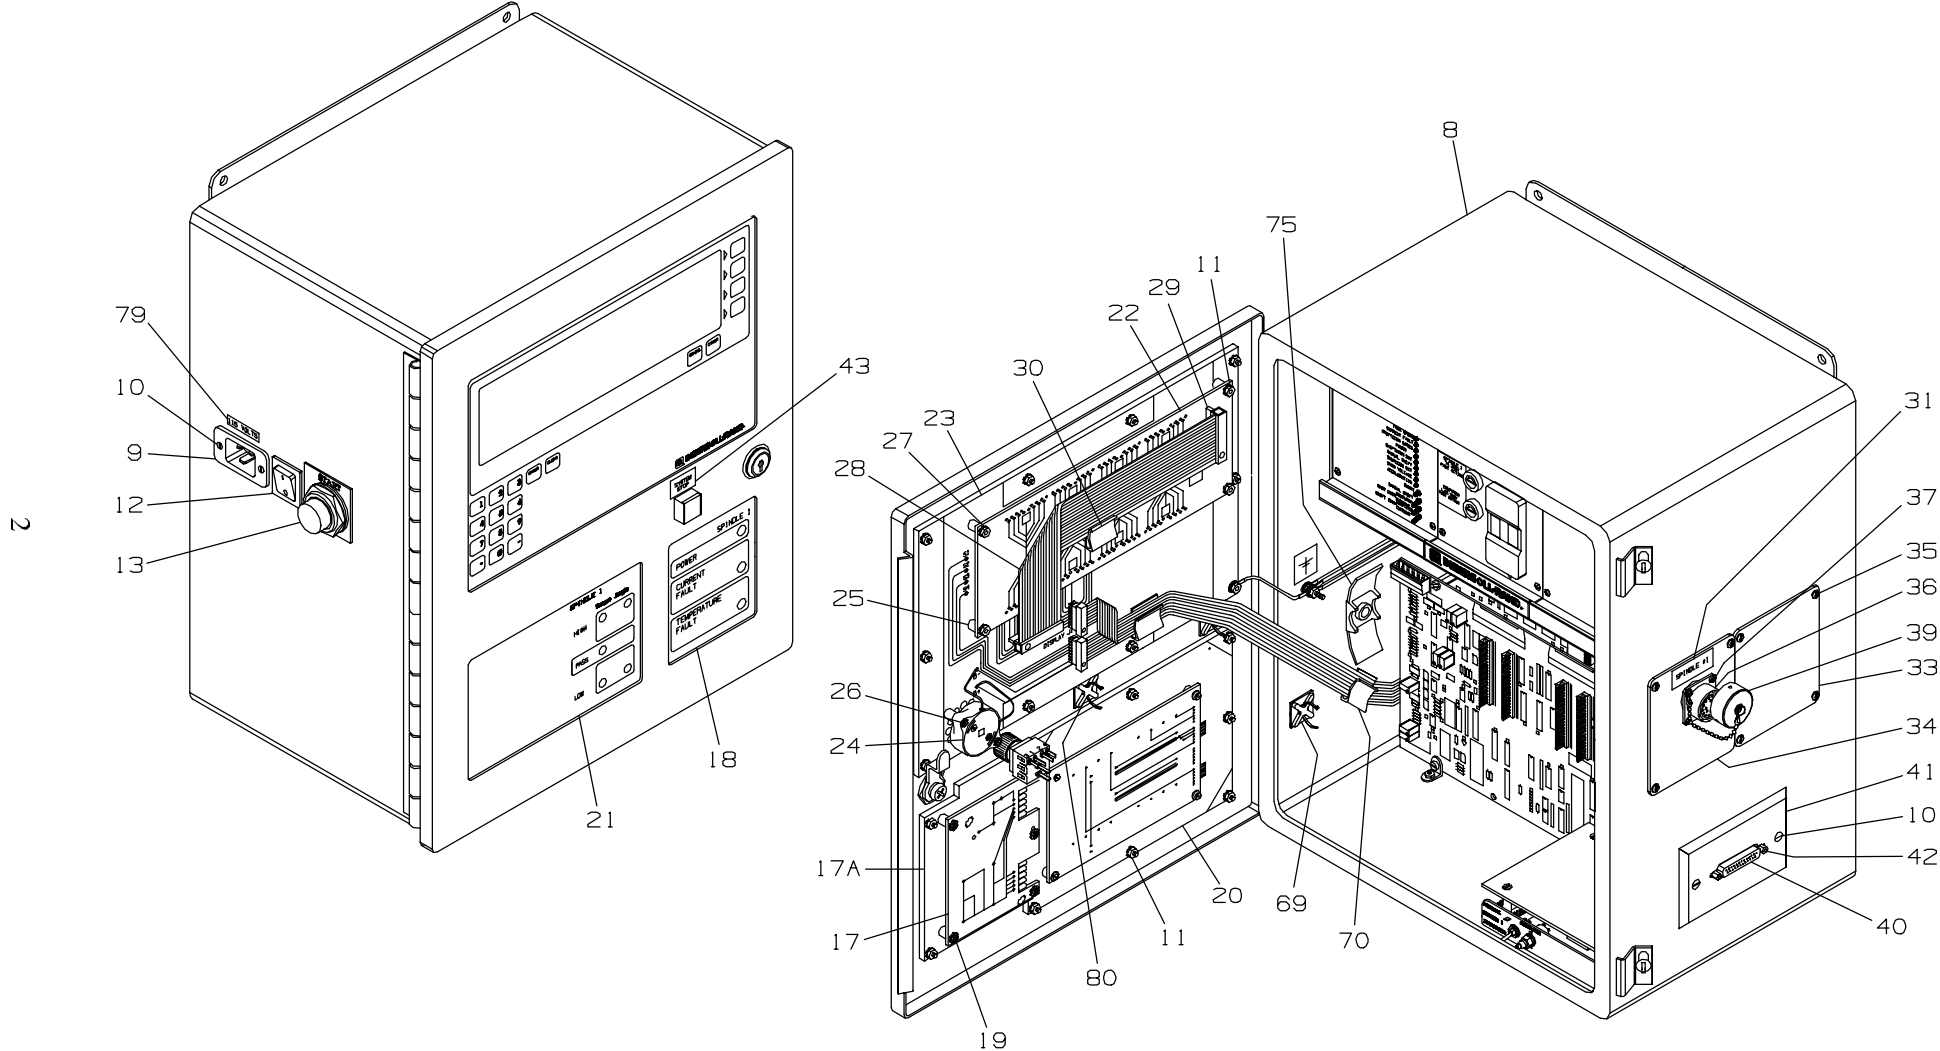


TMAD2-001 EXTERNAL VIEW, TWO WRENCH CABINET ASSEMBLY

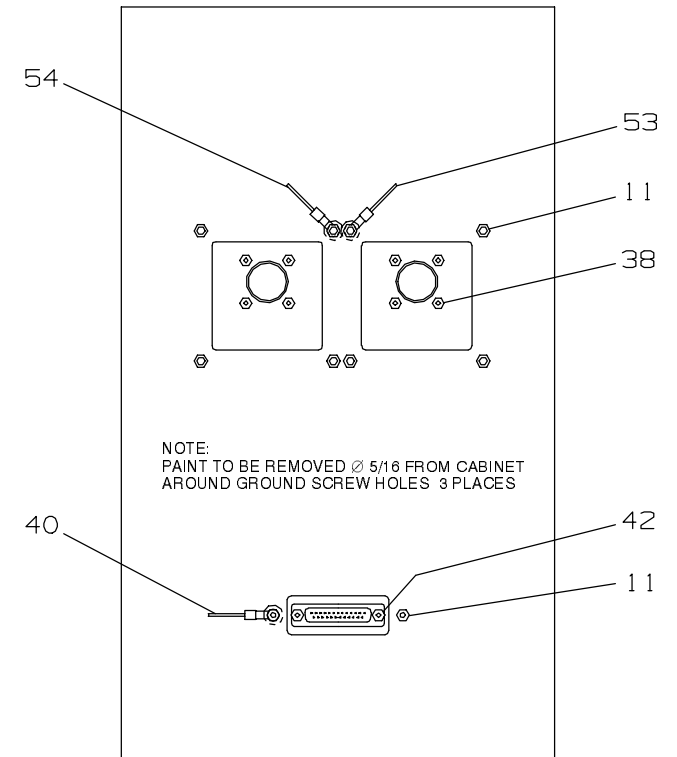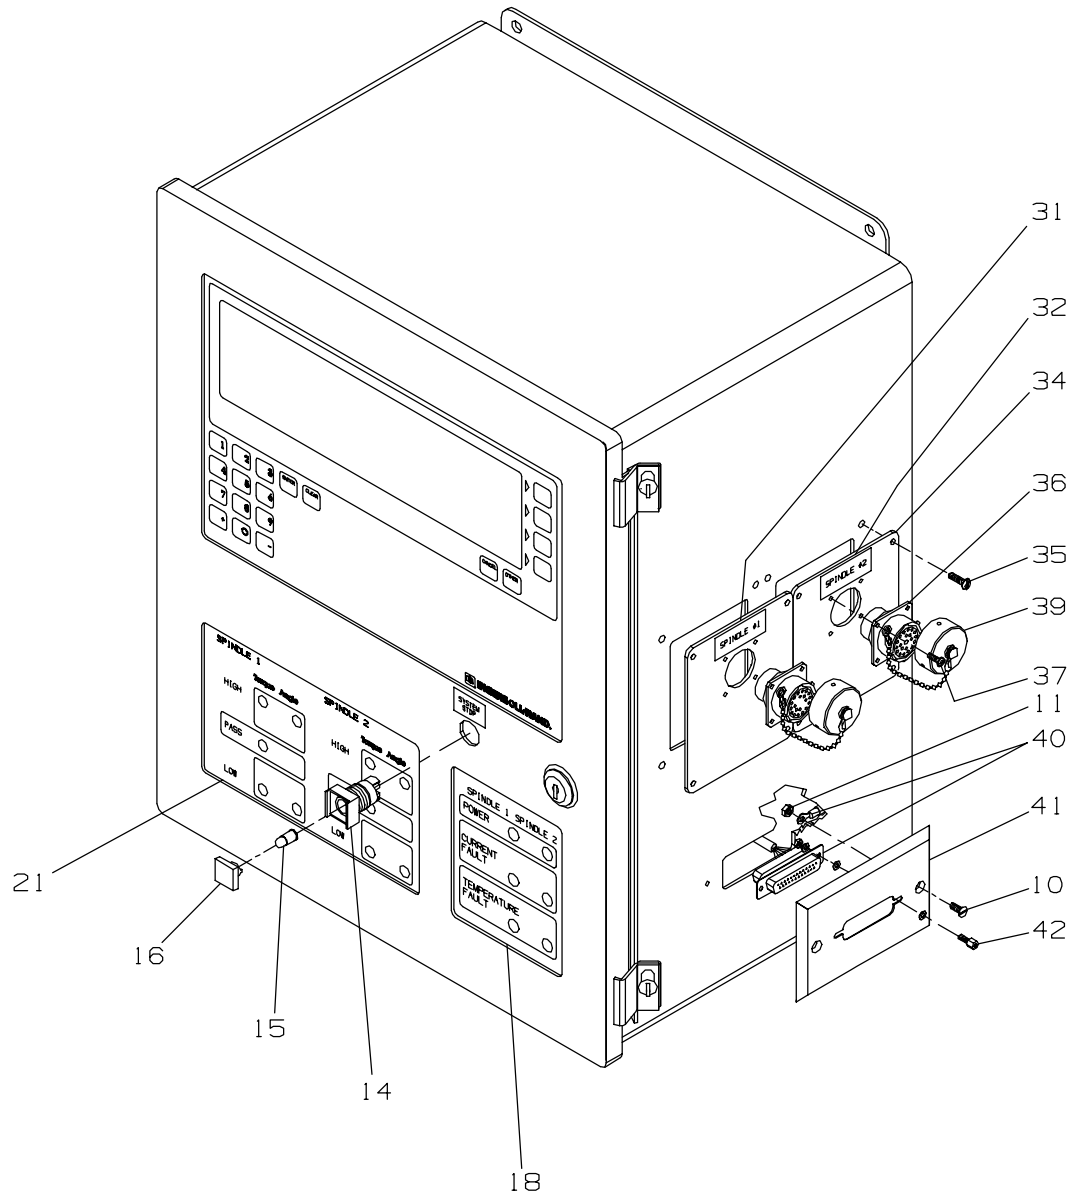

BACK VIEW OF SIDE PANEL
GROUND CONNECTIONS



TMAD1 AND TMAD2 INTERFACE MODULE

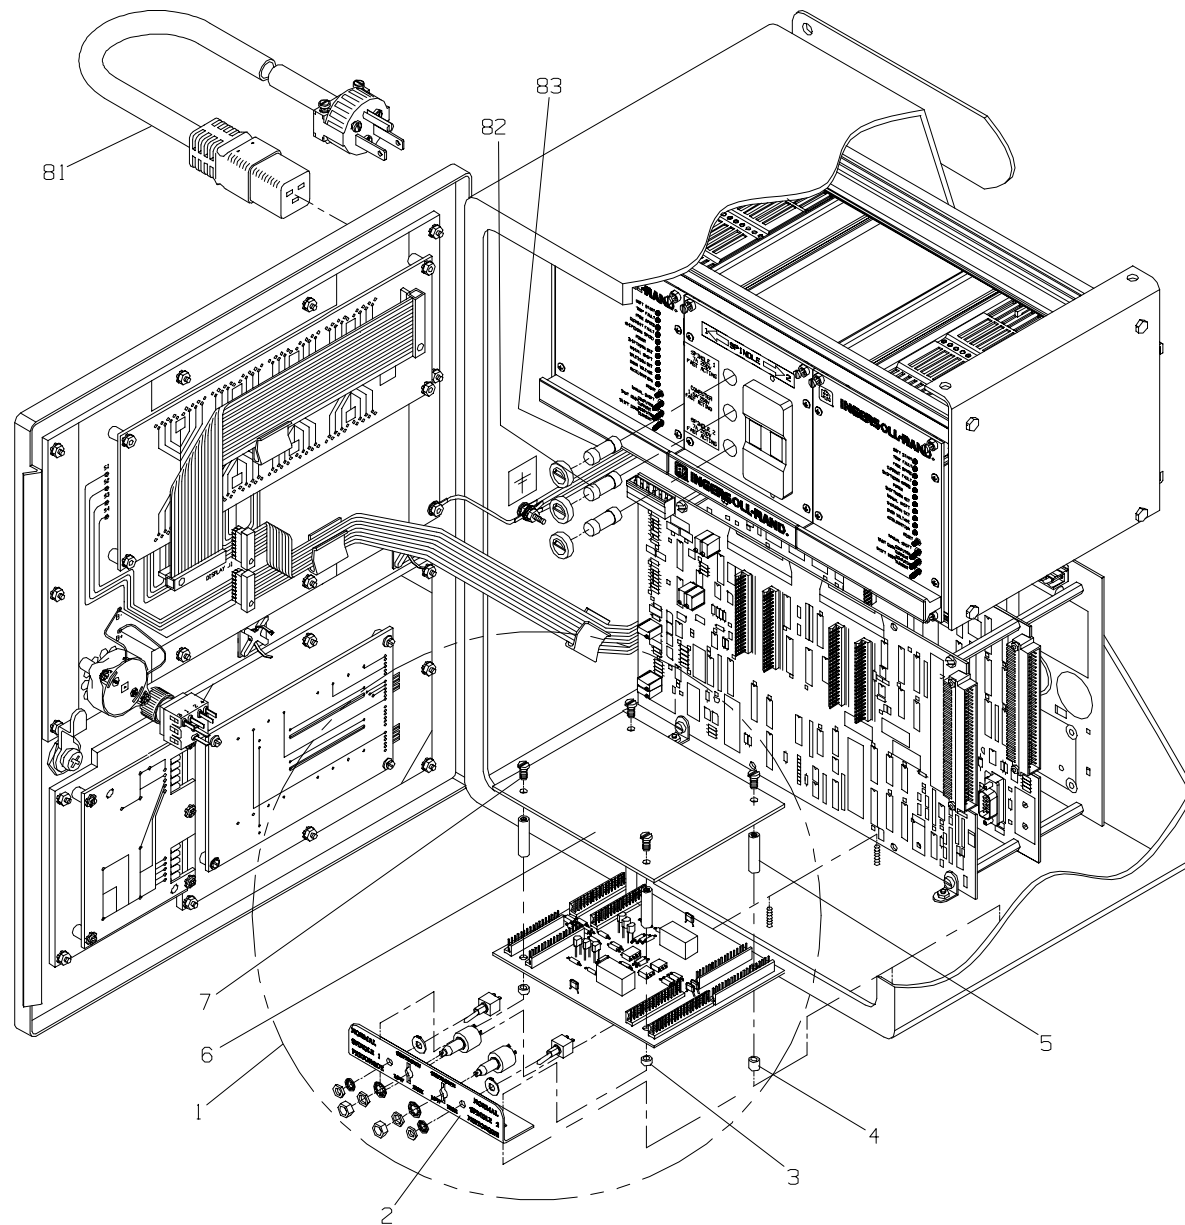

(Dwg. TPA1383)

CONTROLLER RACK FOR TMAD1-001 AND TMAD2-001 CABINET ASSEMBLIES


NOTE:
ALL LOCATIONS TOP AND BOTTOM

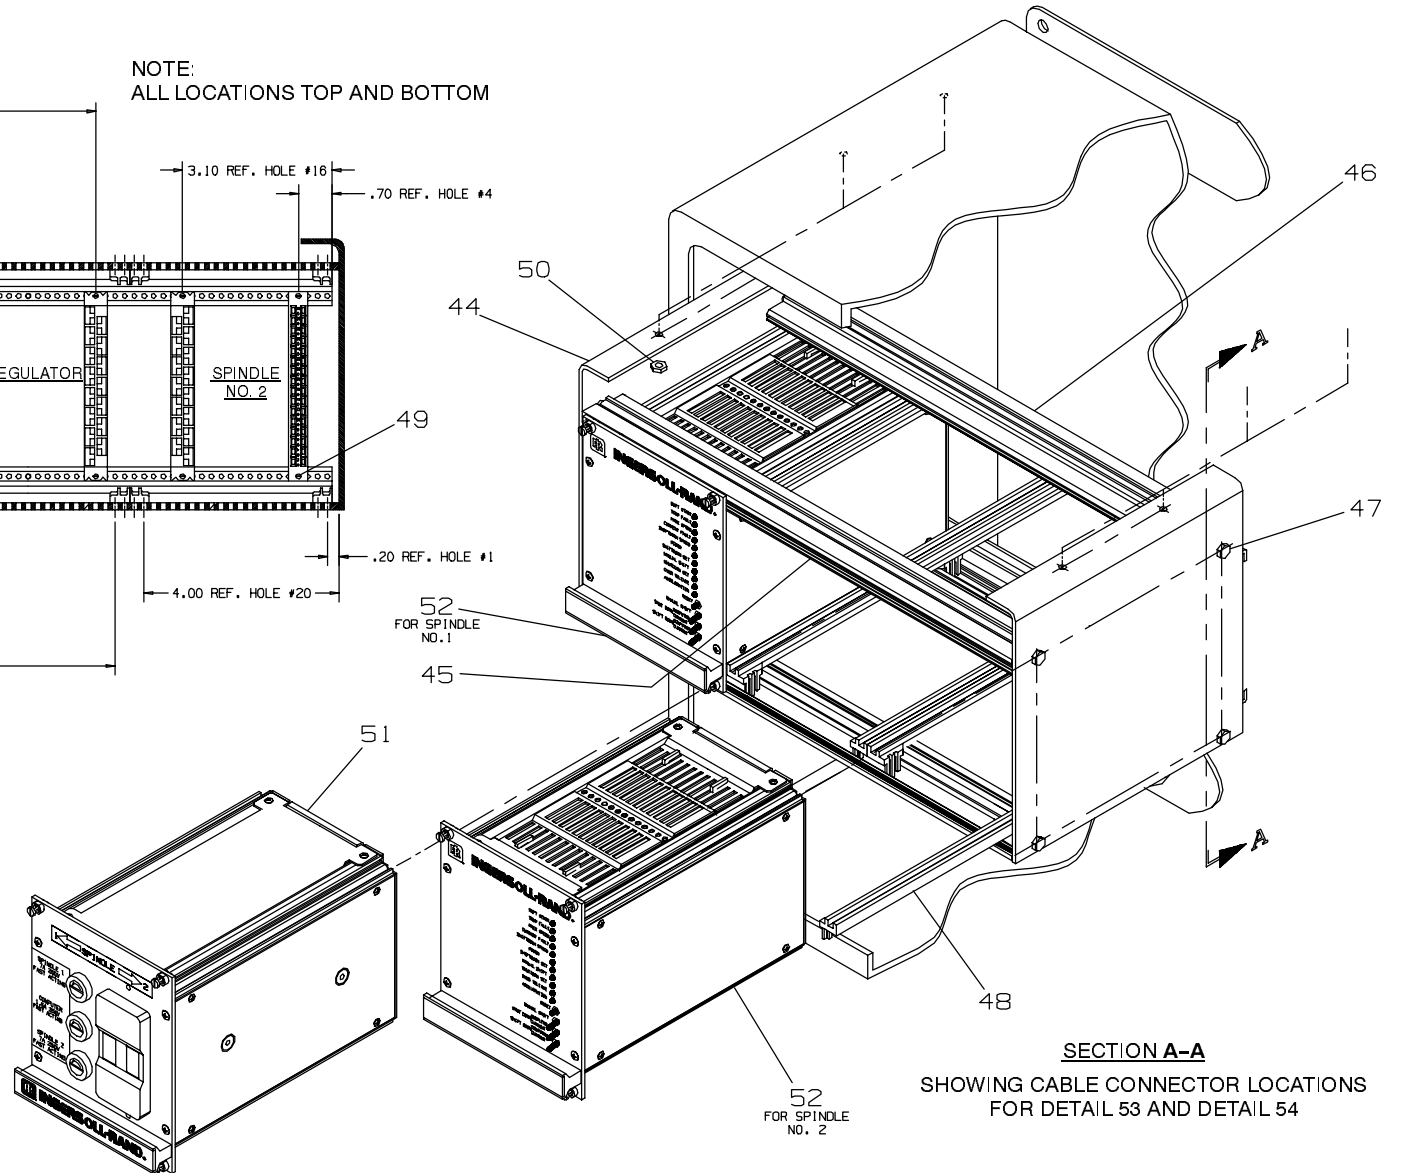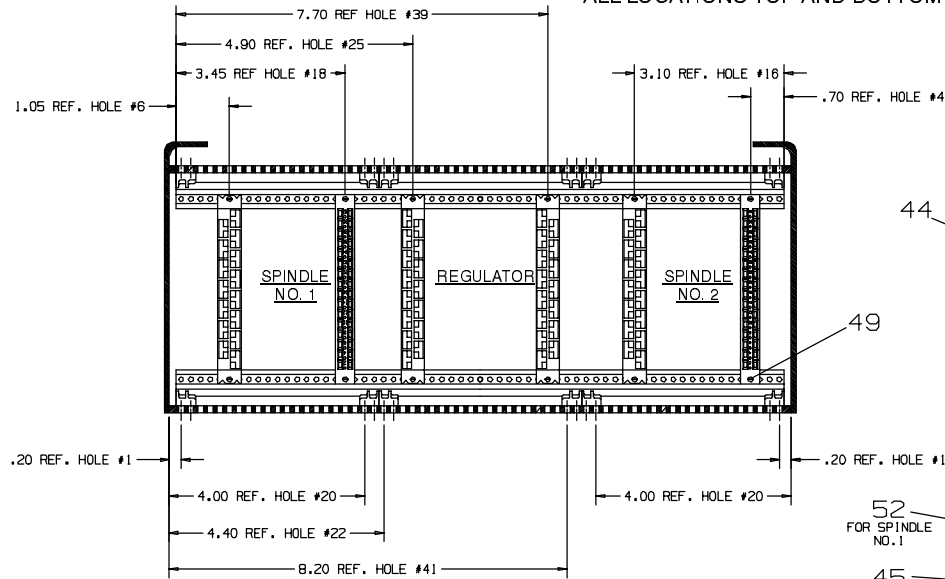

(Dwg. TPA1379)


TMAD1 AND TMAD2 CABINET WIRING

9

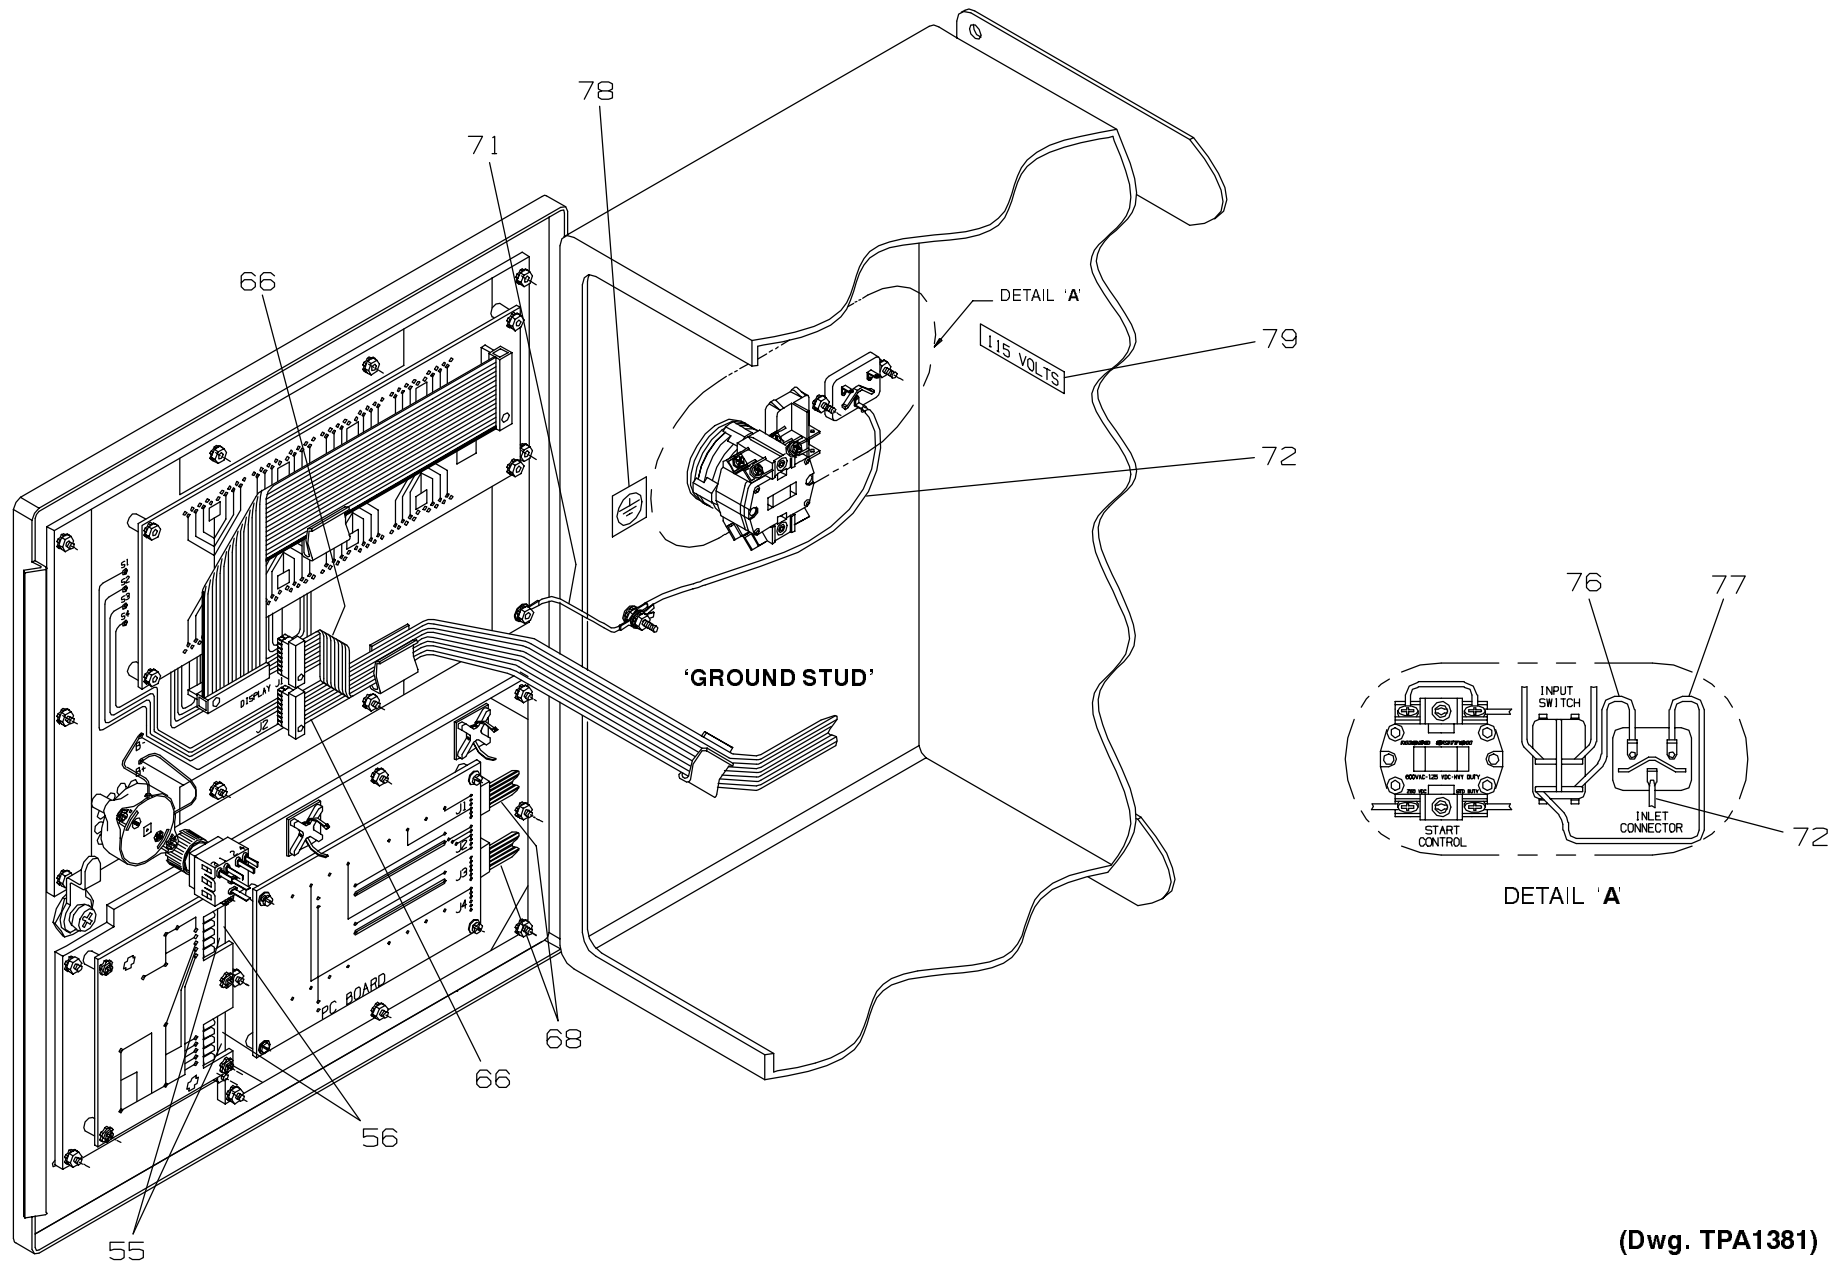


(Dwg. TPA1381)

TMAD1 AND TMAD2 CIRCUIT BOARD ASSEMBLIES

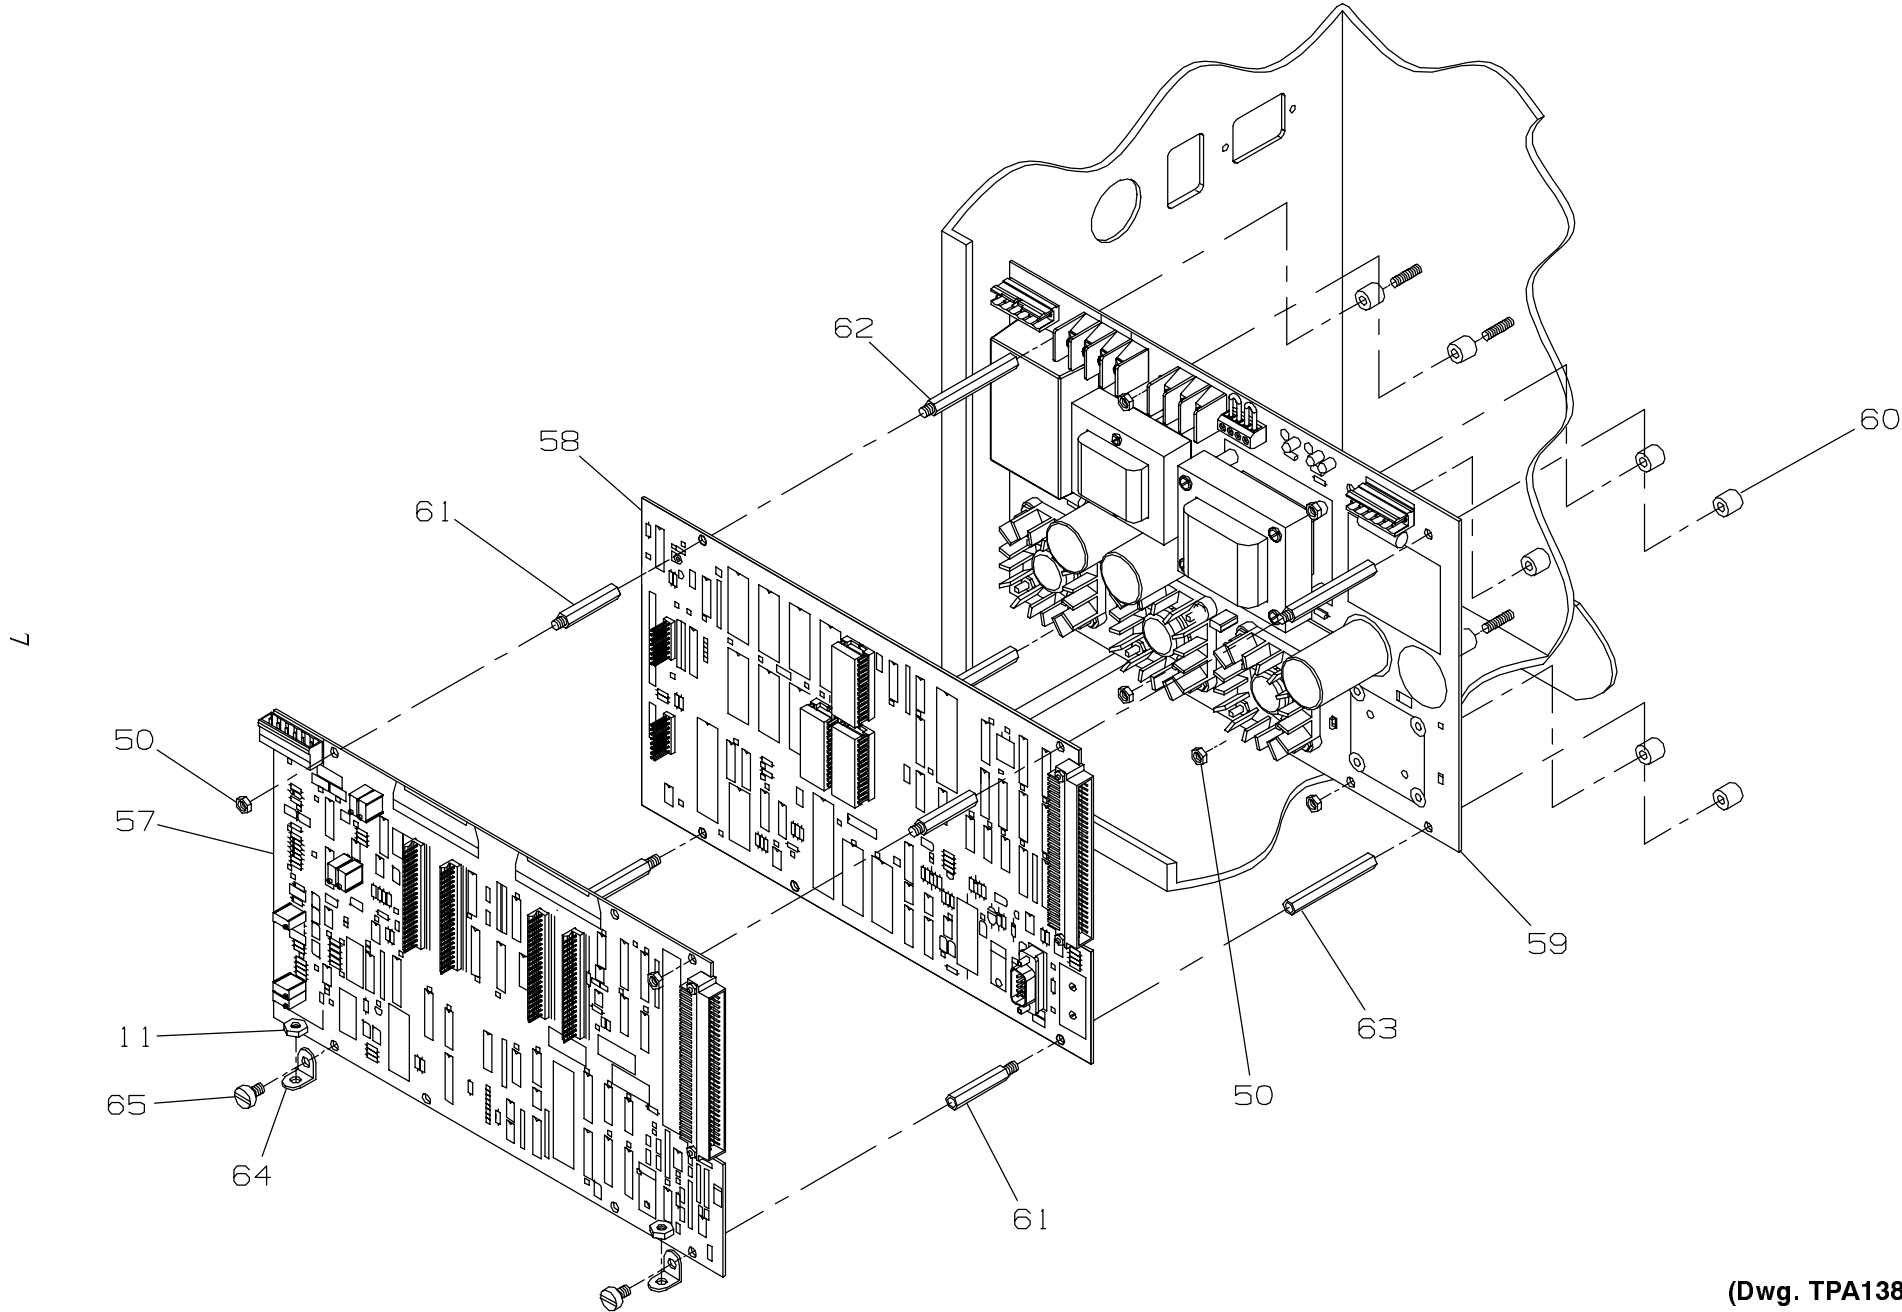

TMAD1 AND TMAD2 CIRCUIT BOARD WIRING

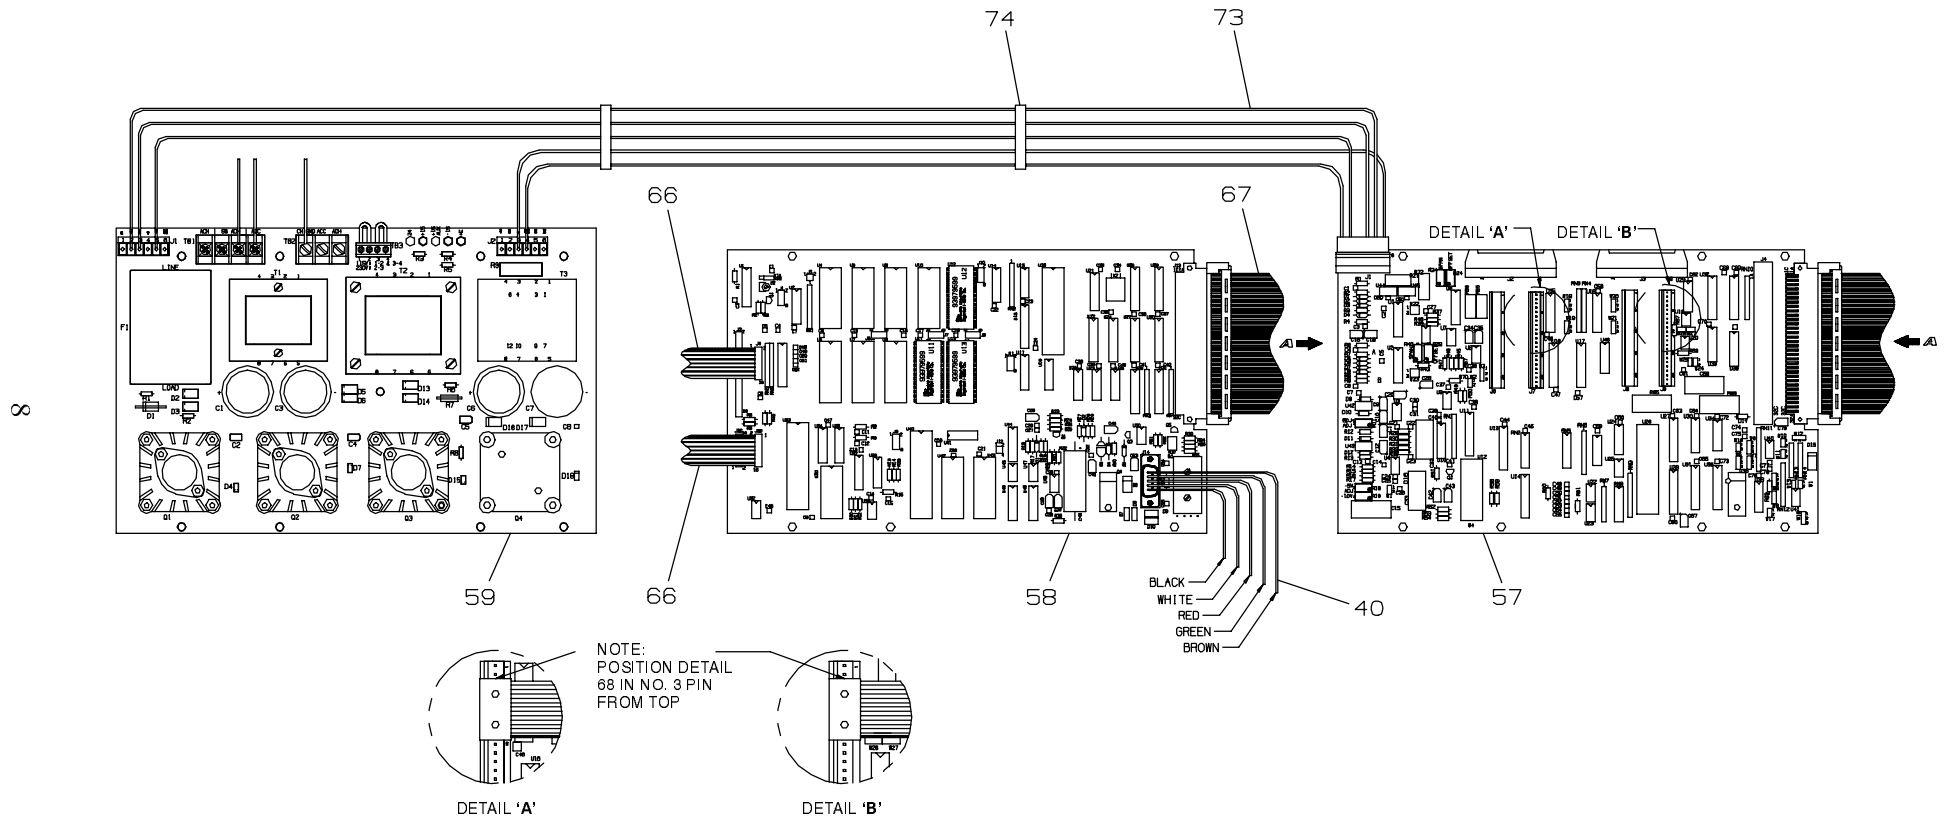

PART NUMBER FOR ORDERING

PART NUMBER FOR ORDERING

	Cabinet (complete)		20	Control Panel Assembly	
	for one wrench hook-up	TMAD1-001		for TMAD1-001	DEA40-A906-1
	for two wrench hook-up	TMAD2-001		for TMAD2-001	DEA40-A906-2
1	Interface Board Module		21	Control Panel Label	---
	for TMAD1-001	DEA40-M950-1		LCD Display Assembly	DEA40-A905
	for TMAD2-001	DEA40-M950-2	22	LCD Display	---
2	Interface Board Bracket	---	23	LCD Board	---
3	Spacer (1/8" long) (2)	---	24	Sounder	---
4	Spacer (1/4" long) (2)	---	25	Spacer (1/4") (4)	---
5	Spacer (1" long) (4)	---	26	Sems Screw (#4-40 thread x 3/8"	
6	Board Cover	---		long) (2)	---
7	Cover Screw (#6-32 thread x 1/2"		27	Keps Nut (#4-40 thread) (4)	---
	long) (4)	---	28	Cable Assembly (15 pin)	---
8	Cabinet Assembly		29	Cable Connector (15 pin)	---
	for TMAD1-001	DEA40-A850-1	30	Cable Mount	---
	for TMAD2-001	DEA40-A850-2	31	Spindle #1 Label	DEA40-873
9	Inlet Connector	DEA40-861	32	Spindle #2 Label (for TMAD2-001)	DEA40-874
10	Screw (#6-32 thread x 1/2"		33	Receptacle Cover Blank	
	long slotted) (4)	---		(for TMAD1-001)	DEA40-859
11	Keps Nut (#6-32 thread) (36)	---	34	Receptacle Cover (1 for TMAD1-001;	
12	Input Switch	DEA40-862		2 for TMAD2-001)	DEA40-860
13	Start Control	DEA40-865	35	Cover Mounting Screw	
14	Switch-system Stop	DEA40-867		(#6-32 thread x 1/2" long slotted) (8)	---
15	Bulb-system Stop	DEA40-969	36	Tool Receptacle (1 for TMAD1-001;	
16	Lens-system Stop	DEA40-868		2 for TMAD2-001)	DEA40-967
17	Light Board Assembly		37	Receptacle Mounting Screw	
	for TMAD1-001	DEA40-A866-1		(#4-40 thread x 3/8" long Pan Head)	
	for TMAD2-001	DEA40-A866-2		(4 for TMAD1-001; 8 for TMAD2-001)	---
17A	Light Panel Assembly	DEA40-855	38	Mounting Screw Keps Nut (#4-40 thread)	
18	Light Panel Label	---		(4 for TMAD1-001; 8 for TMAD2-001)	---
19	Sems Screw (#6-32 thread x 1/4"		39	Tool Receptacle Cover (1 for TMAD1-001;	
	long) (5)	---		2 for TMAD2-001)	DEA40-872

PART NUMBER FOR ORDERING

PART NUMBER FOR ORDERING

40	CPU Cable	DEA40-907	61	Male/Female Standoff (#8-32 thread x 1-1/4" long) (4)	DEA40-910
41	CPU Cable Receptacle Cover	DEA40-917	62	Male/Female Standoff (#8-32 thread x 2" long) (2)	DEA40-911
42	Screwlock (complete) (2)	DEA40-919	63	Female/Female Standoff (#8-32 thread x 2" long) (2)	DEA40-924
43	System Stop Label	DEA40-870	64	Mounting Bracket (2)	DEA40-918
44	Regulator Rack	DEA40-968	65	Sems Screw (#8-32 thread x 3/8" long) (2)	---
45	Bracket (2)	---	66	Cable (16 wire) (2)	DEA40-914
46	Front Horizontal Rail (2)	---	67	Cable (64 wire)	DEA40-915
47	Rear Horizontal Rail (2)	---	68	Cable (7 wire) (1 for TMAD1-001; 2 for TMAD2-001)	DEA40-935
48	Bracket Screw (M5 x 12 Hex Head Screw) (8)	---	69	Cable Mount (Tie Type) (2)	DEA40-937
49	Rack Guide Rail (8 for TMAD1-001; 12 for TMAD2-001)	DEA40-851	70	Cable Mount (Flat Type) (2)	DEA40-938
50	Guide Rail Screw (M2.5 x 6 Pan Head) (6 for TMAD1-001; 12 for TMAD2-001) ...	---	71	Ground Strap	DEA40-939
51	Keps Nut (#8-32 thread) (13)	---	72	Ground Lead	DEA40-940
52	Regulator for TMAD1-001	DEA40-A750-1	73	Power Distribution Cable	DEA40-944
53	for TMAD2-001	DEA40-A750-2	74	Cable tie (2)	---
54	Controller (1 for TMAD1-001; 2 for TMAD2-001)	DEA40-700	75	Clincher Adjustable Clamp (4)	DEA40-949
55	#1 Spindle Cable	DEA40-966-1	76	Jumper Wire (inlet connector to input switch) (black)	DEA40-962
56	#2 Spindle Cable (for TMAD2-001 only) ...	DEA40-966-2	77	Jumper Wire (inlet connector to input switch) (white)	DEA40-963
57	Connector (1 for TMAD1-001; 2 for TMAD2-001)	DEA40-970-5	78	Ground Label	DEA40-871
58	Dust Cover (1 for TMAD1-001; 2 for TMAD2-001)	DEA40-946-5	79	Voltage Marker Label (2)	DEA40-875
59	Input/Output Board Assembly for TMAD1-001	DEA40-A902	80	Cable Tie (4)	---
60	for TMAD2-001	DEA40-A903	81	Input Cord Assembly	DEA40-A864
	CPU Board Assembly	DEA40-A900	82	Fuse (1.5 amp; 250 volt; fast-acting)	---
	Power Supply Board Assembly	DEA40-A901	83	Fuse (7 amp; 250 volt; fast-acting) (2)	---
	Spacer (3/8" long) (9)	DEA40-909	*	Interface Cable (10 wire) (2)	DEA40-947
			*	Interface Cable (16 wire) (2)	DEA40-948

* Not illustrated.

NOTES

