



04579058

Form S7574
Edition 1
August, 2002

ETT Series Manual Addendum

Printing Instructions:

1. Printing using Windows HyperTerminal

1.1. To establish HyperTerminal connection:

1.1.1. Connect ETA2-PC99 Cable to ETT Torque Tester and to PC COM1 port.

1.1.2. Run Windows HyperTerminal

1.1.2.1. Connection Description panel

1.1.2.1.1. Enter connection name:

1.1.2.1.2. Select icon for connection

1.1.2.1.3. Select OK

1.1.2.2. Phone Number panel

1.1.2.2.1. Change Connect Using to: Direct to COM1

1.1.2.2.2. Select OK

1.1.2.3. Port Settings panel

1.1.2.3.1. Change Bits per second to: 9600

1.1.2.3.2. Select OK

1.2. To print Data Header to HyperTerminal select: Printer / Print Header

1.2.1. Software Version

1.2.2. Serial number

1.2.3. Next calibration date

1.2.4. Calibration span

1.3. To Print torque values to HyperTerminal select: Printer / Auto Print / On

1.4. To print HyperTerminal screen to default printer select: File / Print (Windows)

2. Miscellaneous functions

2.1. To clear samples press:



2.2. While in SETUP, to change a value, or add an additional digit press:



Refer all communications to the nearest Ingersoll-Rand Office or Distributor.

© Ingersoll-Rand Company 2002

Printed in U.K.

