


Description:

This bulletin describes the correct loading of **Insight ICD** and **ICM** Software. **RISC** software, the **Language File**, and the **MCE** software are all loaded different ways.

PC Setup Procedure for FTP:

1. From the “Start” menu select “Settings” then “Control Panel”
2. From the Control Panel double click “Network” icon.
3. In the “Configuration” tab, scroll down until you find “TCP/IP -> (your network card name that you will connect to the Insight -IC box).
4. Click “Properties” and you will get into another screen.
5. Click on “Specify an IP address”
6. Type in **192.168.4.100** for the “IP Address”
7. Type in **255.255.255.0** for the “Subnet Mask”

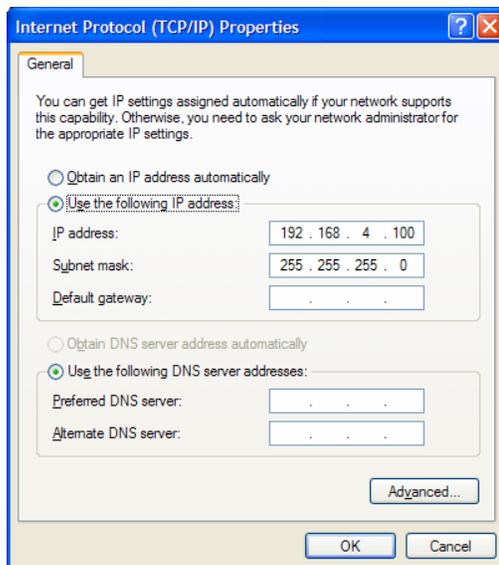

8. Click “OK”. Restart the computer if required.
9. Connect an RJ-45 Ethernet Crossover Cable from the PC to the Insight-IC box directly. If you are using a hub then use 2 RJ-45 Patch Cables.


Note: You can tell the difference between Ethernet Patch Cable and Crossover Cable by looking at the wire colors at the ends. Both ends of a Patch Cable will look the same, but some wires will be in different positions on a Crossover Cable.

Leech FTP Setup:


1. Add a bookmark in Leech FTP with “**192.168.4.4**” for the “Host or URL”, “**i320risc**” for the “Username”, and “**olympus**” for the “Password”.

RISC Software Loading Procedure:

1. Connect the controller to the PC using an Ethernet crossover cable.
2. With the controller OFF change the CAN switch position to **98** as shown.

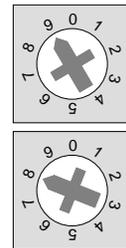

3. Turn ON the controller. Wait about **15 seconds** until:
ICD: Message “**FTP file: /icdm_runtime.irb**” appears
ICM: Message “**E-017**” appears
4. Connect to the controller using LeechFTP and the **192.168.4.4** bookmark described above.
5. Highlight the RISC files “**icdm_runtime.irb**” and “**restart.txt**” and click the “Upload” icon.

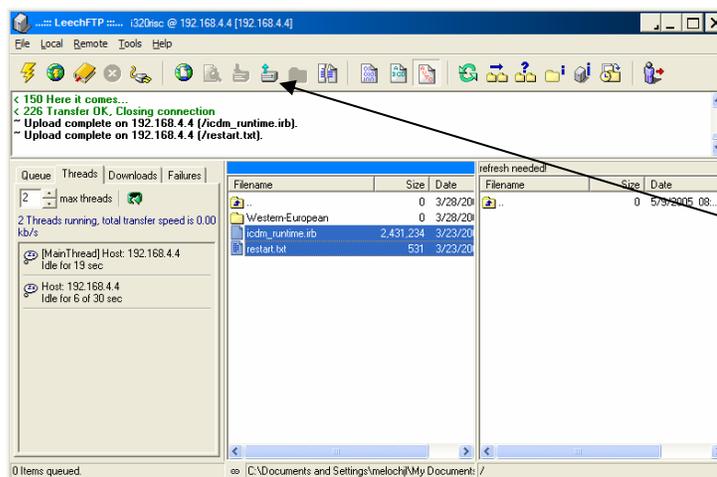

UPLOAD ICON

Wait about **10 seconds** until:



- ICD:** Message “**Restore CAN switch position to runtime setting.**” appears
- ICM:** Message “**E-016**” appears

6. Change the CAN switch position to **85** as shown. The controller will start showing percentage of load:

ICD: Shows the actual percentage.

ICM: Shows dashes across the screen until there are 5 dashes total.

The controller will reboot automatically. **DO NOT TURN OFF THE UNIT DURING THIS PROCESS.**

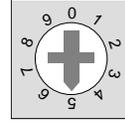
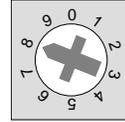


7. Wait about **4 minutes** until:

ICD: Message “**Set CAN switch to accept or reject, 87 or 83.**” appears

ICM: Message “**E-048**” appears.

8. Change the CAN switch position to **87** as shown.

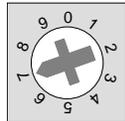
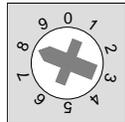


9. Wait about **5 seconds** until:

ICD: Message “**Restore CAN switch to runtime setting.**” appears

ICM: Message “**E-016**” appears.

10. Change the CAN switch position to **00** as shown.

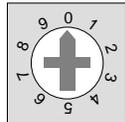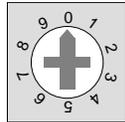

11. Wait about **3 minutes** while the system formats and restarts:


ICD: Displays the Run/ Main screen.

ICM: Message “**E-051**” and “**0.0**” appears.

NOTE: On the ICD, the message “PSR file not found – default language file is being used.” will briefly flash on the screen. This is normal for the first boot-up following a software upgrade.

Language File Loading Procedure:


1. Connect the controller to the PC using an Ethernet crossover cable.
2. Connect to the controller using LeechFTP and the **192.168.4.4** bookmark described above.
3. In the right-hand panel, double-click on “**flash**”, then “**icdm**”, and then “**Ing**”.
4. Highlight the Language file “**icdm_language.psr**” and click the “Upload” icon.

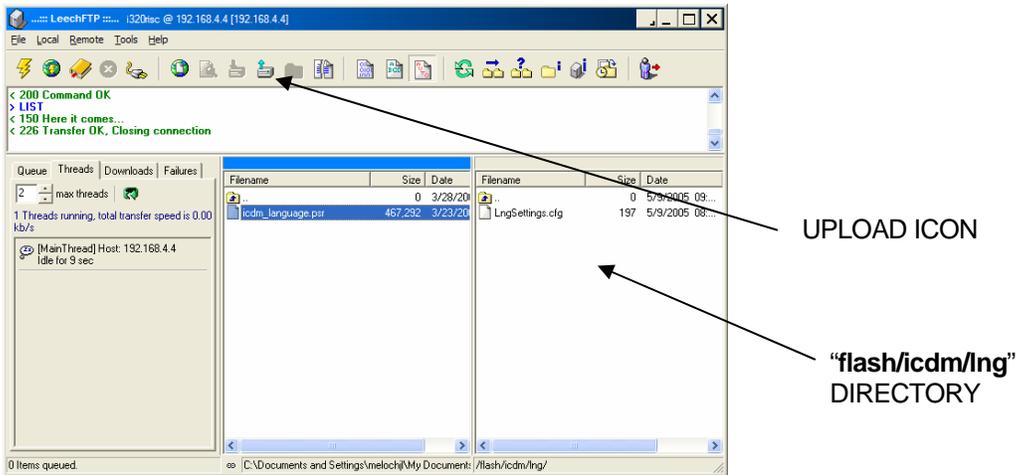

5. Reboot the controller.

MCE File Loading Procedure:

1. Connect the controller to the PC using an Ethernet crossover cable.
2. Connect to the controller using LeechFTP and the **192.168.4.4** bookmark described above.
3. In the right-hand panel, double-click on “flash” then “icdm”.
4. Go to the **Remote** menu and choose “**Create Directory...**”

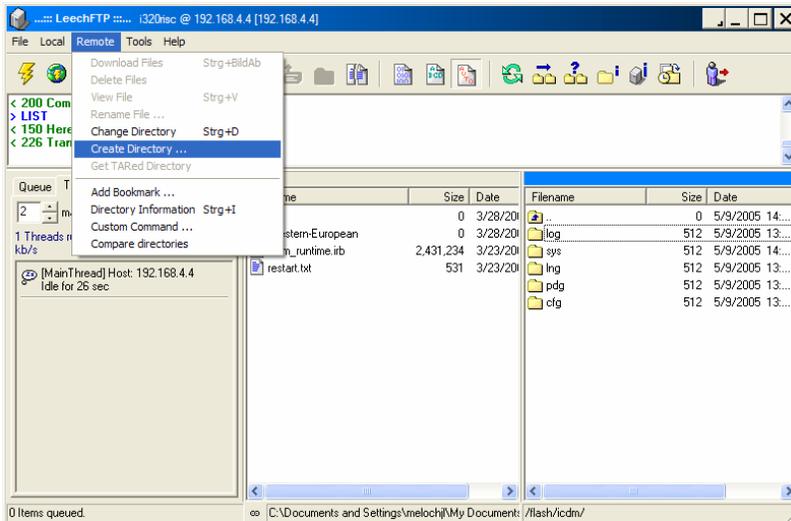


5. Name the new directory “**bin**”.



6. Ensure that a tool is attached to the controller and launch **ICS Connect**.
7. Go to the **Setup** menu and select “**Download Software**”.
8. Select the controller model type and check the box next to the controller’s IP address.



9. Click on the **Browse** button and find the file called “**icdm_mce.bin**”. Double click on the file.
10. Click on the **Start** button. (Two warnings will appear – Click “**Yes**” and “**OK**” to these).
11. When Progress changes from “**Downloading...**” to “**Completed**”, click on the **Close** button to close the Download Software window.

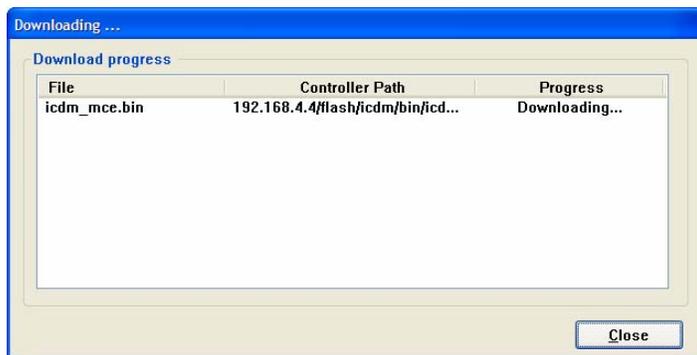

See AS 040905 JM for ICS Software Loading and Licensing
See AS 112403 JM for LeechFTP Setup Instructions