


2115XPTIMAX Air Impactool™ - Exploded View

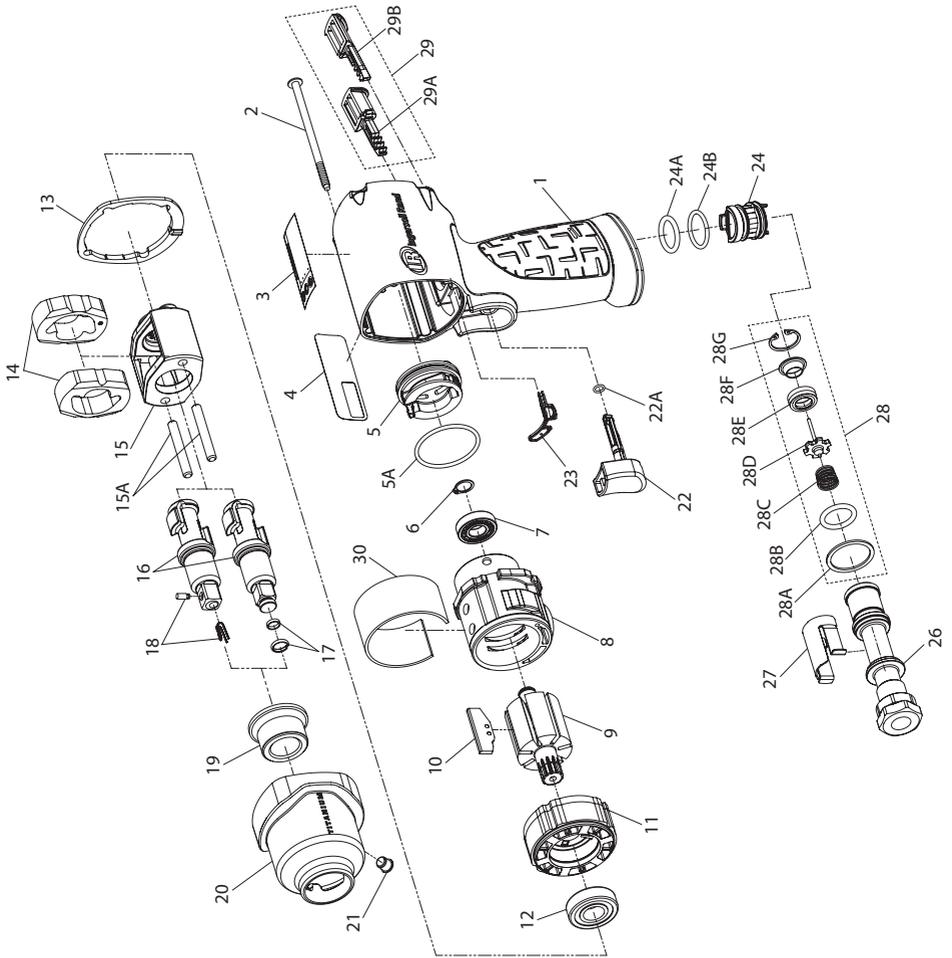

(Dwg. 45588175)



2115XPTiMAX Air Impactool™ - Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
*	Housing Assembly	2115XPTiMAX-A40	*	Reverse Valve Assembly	2131-A329
1	Housing	---	24	Reverse Valve	---
3	Warning Label	---	24A	O-Ring, Reverse Valve (Top-Black)	---
4	Information Label	---	24B	O-Ring, Reverse Valve (Bottom-Blue)	---
23	Gasket, Motor	---	*	Inlet Bushing Assembly	2135-D565A
*	Reverse Valve Assembly	---	26	Inlet Bushing	---
29	Button Kit	---	27	Inlet Clip	2131-57
2	Screw, Hammer Case (4 required)	2115-638	28	Inlet Parts Kit	2135-K303
3	Warning Label	WARNING-2-99	28A	Washer	---
4	Information Label	2115XPTiMAX-300	28B	O-Ring, Seal	---
*	Power Regulator Assembly	2115-D249A	28C	Throttle Spring	---
5	Power Regulator	---	28D	Throttle Valve	---
5A	O-Ring, Power Regulator	---	28E	Valve Seat	---
6	Retaining Ring	4E-6	28F	Seat Support	---
7	Ball Bearing (Cylinder)	R00H-97	28G	Retainer	---
8	Cylinder	2112-3	29	Button Kit	2115-K75RD
9	Rotor	2115-53	29A	Forward Button	---
† 10	Vane Pack (set of 7)	2115-42A-7	29B	Reverse Button	---
11	End Plate	2112-11	30	Silencer	2115Q-311
12	Ball Bearing (End Plate)	2131-97	*	Tune-Up Kit	2115-TK2
† 13	Hammer Case Gasket	2115-36	5A	O-Ring, Power Regulator	---
*	Hammer Mechanism Kit	2115-THK2	6	Retaining Ring	---
14	Hammer (2)	---	7	Ball Bearing (Cylinder)	---
15	Hammer Frame	---	10	Vane Pack (set of 7)	---
15A	Hammer Pin (2)	---	12	Ball Bearing (End Plate)	---
*	Anvil Assembly	2112-A626	13	Hammer Case Gasket	---
16	Anvil	---	22A	O-Ring, Trigger	---
	Socket Retainer Kit	---	23	Gasket, Motor	---
† 17	Socket Retainer Kit	2115-K425	24A	O-Ring, Reverse Valve (Top-Black)	---
	O-Ring	---	24B	O-Ring, Reverse Valve (Bottom-Blue)	---
	Socket Retainer	---	28	Inlet Parts Kit	---
† 18	Socket Retainer Kit	2115PTi-K425	*	Kit, Piped-Away Exhaust	2115-K284
	Retainer Spring	---	*	Inlet Clip Removal Tool	2131-322
	Socket Retainer Pin	---	† *	Air Care Kit (grease gun, grease, oil)	115-LBK1
19	Bushing, Hammer Case	2112-641	*	Grease (replacement tube for -LBK1)	115-4T
*	Hammer Case Assembly	2115TiMAX-D727	*	Air Tool Oil (4 oz. bottle)	1024
19	Bushing, Hammer Case	---	*	Grease (1 lb can)	105-1LB
20	Hammer Case	---	*	Grease (8 lb can)	105-8LB
21	Grease Fitting	---	*	Grease Gun	R000A2-228
21	Grease Fitting	1305R-188			
† *	Trigger Assembly	2135-D93B			
22	Trigger	---			
22A	O-Ring, Trigger	---			
† 23	Gasket, Motor	2112-283			

* Not illustrated.

† To keep downtime to a minimum, it is desirable to have certain repair parts on hand. We recommend that you stock one (pair or set) of each part indicated by a (†) for every four tools in service.

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Related Documentation

For additional information refer to:

Air Impact Wrench Product Safety Information Manual 04580916.

Air Impact Wrench Product Information Manual 48489207.

Manuals can be downloaded from www.ingersollrandproducts.com.



www.ingersollrandproducts.com
© 2012 **Ingersoll-Rand** Company

48489215
Edition 1
April 2012