


Model 326G Cut-Off Air Tool - Exploded View

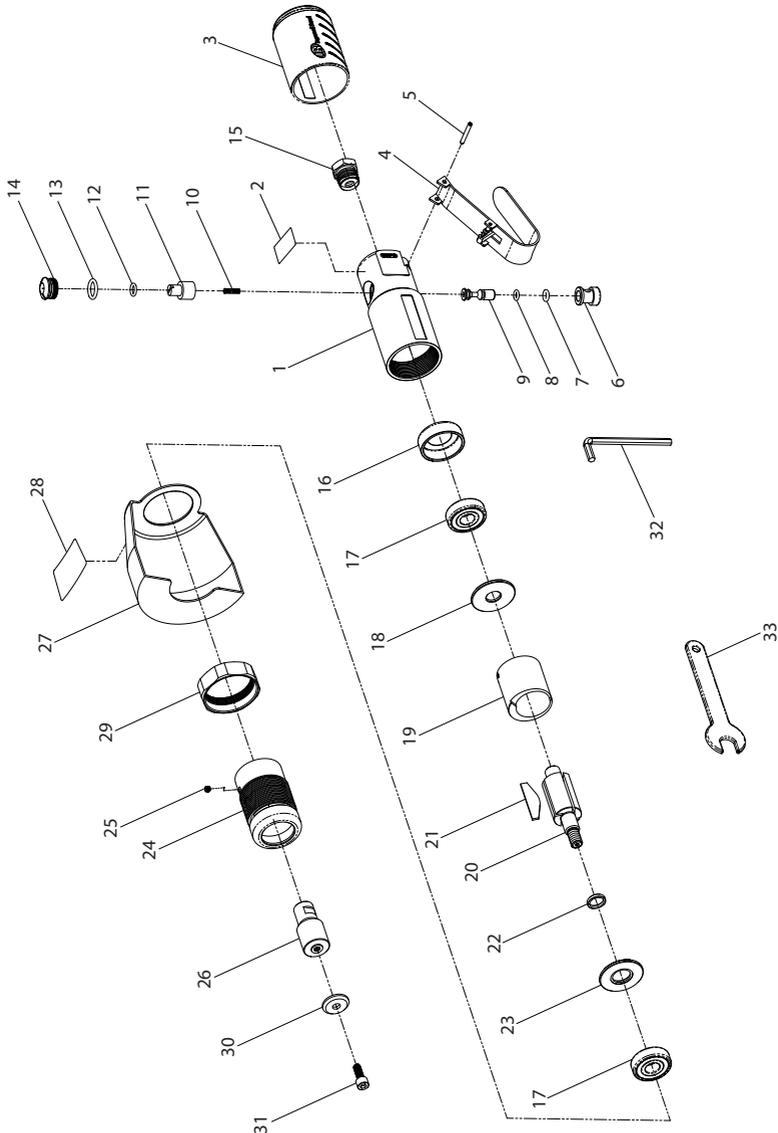

(Dwg. 45661451)



Model 326G Cut-Off Air Tool - Parts List

| Item | Part Description | Part Number | Item | Part Description | Part Number |
|------|-------------------------|-------------|------|-----------------------|-------------|
| * | Housing Kit | 326G-A40 | * | Motor Assembly | 326-A53 |
| 1 | Housing | --- | 16 | Spacer | --- |
| 2 | Label | 326G-301 | 17 | Bearing | --- |
| 3 | Grip | 326G-747 | 18 | Rear End Plate | --- |
| 4 | Throttle Lever Assembly | 326G-A400 | 19 | Cylinder | --- |
| 5 | Throttle Lever Pin | --- | 20 | Rotor | --- |
| * | Throttle Valve Kit | 326G-K302 | 21 | Vane (4) | --- |
| 6 | Bushing | --- | 22 | Bushing | --- |
| 7 | O-Ring | --- | 23 | Front Endplate | --- |
| 8 | O-Ring | --- | 24 | Cylinder Housing | --- |
| 9 | Valve Stem | --- | 25 | Screw | --- |
| 10 | Valve Spring | --- | 26 | Collet | --- |
| 11 | Regulator | --- | * | Spark Shield Assembly | 326G-A931 |
| 12 | O-Ring | --- | 27 | Steel Spark Shield | --- |
| 13 | O-Ring | --- | 28 | Warning Label | 326G-99 |
| 14 | Throttle Valve Plug | --- | 29 | Spark Shield Lock Nut | 326-27 |
| 15 | Inlet Bushing | 326G-565 | 30 | Wheel Flange | 326-337 |
| | | | 31 | Wheel Flange Screw | 326-338 |
| | | | 32 | Flange Screw Wrench | 326-68 |
| | | | 33 | Arbor Wrench | 326-69 |

* Not Illustrated.

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.

Refer all communications to the nearest **Ingersoll Rand** Office or Distributor.

Related Documentation

For additional information refer to:

Product Safety Information Manual 45661436.

Product Information Manual 45661105.

Manuals can be downloaded from www.ingersollrandproducts.com.