


## 2575 Cordless Drill/Driver Exploded Diagram

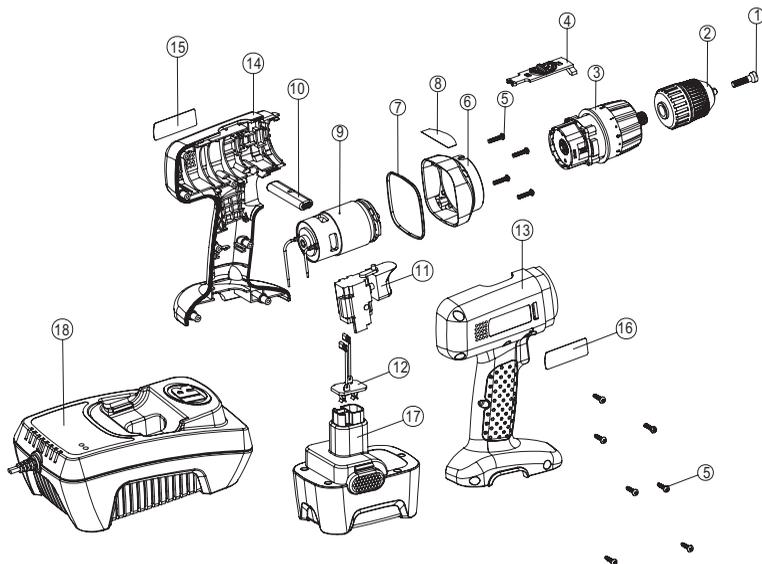

(Dwg. 16573404)

## 2575 Cordless Drill/Driver Parts List

Item	Part Description	Part Number	Item	Part Description	Part Number
*	Chuck Kit	2575-K255	*	Housing Kit	2575-K40
1	Screw, Chuck	---	13	Right Housing	---
2	Chuck	---	14	Left Housing	---
3	Gear Box Assembly	2575-A750	15	Nameplate	---
4	High/Low Speed Switch Kit	2575-K249	16	Info Label	---
*	Gear Box Cover Kit	2575-K144	5	Screw, Housing (7 required)	---
5	Screw, Housing (4 Required)	---	17	14.4V Ni-Mh Battery Pack	2505M
6	Gear Box Cover	---	18	230V Charger	2507G
7	Hammer Case Gasket	---	*	Fastener Kit	2575-K638
8	Warning Label	---	5	Screw, Housing (11 Required)	---
9	Electric Motor Assembly	2575-A54	*	Label Kit	2575-K99
10	Forward/Reverse Actuator	2512-75	8	Warning Label	---
11	Trigger Assembly	2512-A93	15	Nameplate	---
12	Battery Connector Assembly	2512-A56	16	Info Label	---

\* Not Illustrated.

## Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center.  
Refer all communications to the nearest **Ingersoll-Rand** Office or Distributor.

## Related Documentation

For additional information refer to:  
Cordless Drill Safety Information Manual Form 04581153 and Cordless Drill/Driver Product Information Manual Form 10567535.

Manuals can be downloaded from [www.irttools.com](http://www.irttools.com).



[www.irtools.com](http://www.irtools.com)

© 2005 *Ingersoll-Rand Company*

**Form 80177496**

Edition 1

August 2005