


Model 9115 HVLP Gravity Feed Sprayer Exploded Diagram

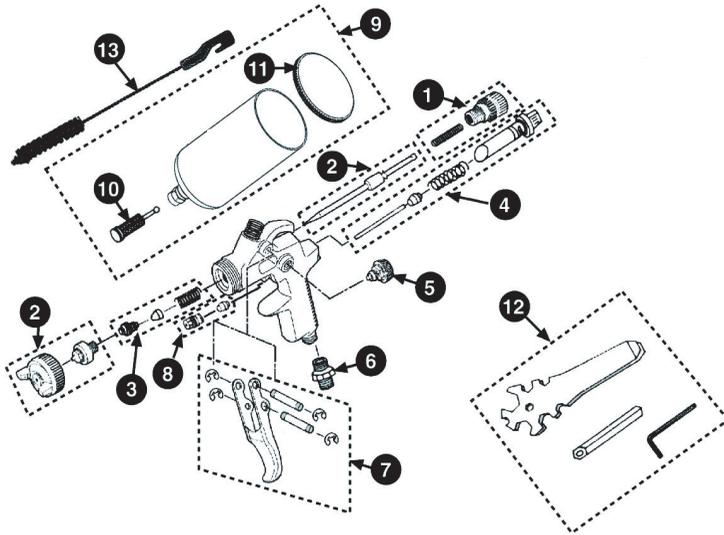

(Dwg. TP2267)

Model 9115 HVLP Gravity Feed Sprayer Parts List

Item	Part Description	Part Number
1	Fluid Control Knob Kit	PF260-K30
2	Needle Kit(1.4 mm)	PF260-K20
3	Packing Kit	PF260-K40
4	Air Valve Kit	PF260-K50
5	Pattern Control Valve and Knob	PF260-60
6	Inlet Bushing	PF260-565
7	Trigger	PF260-K80
8	Air Valve Seal Kit	PF260-K70
9	Cup	PF260-K100
10	Filter	PF260-140
11	Lid	270G-90
---	Name Plate (not shown)	9115-301
12	Wrench Kit	PF260-200
13	Brush	PF260-160

Parts and Maintenance

When the life of the tool has expired, it is recommended that the tool be disassembled, degreased and parts be separated by material so that they can be recycled.

Tool repair and maintenance should only be carried out by an authorized Service Center. Refer all communications to the nearest **Ingersoll-Rand** Office or Distributor.

Related Documentation

For additional information refer to:
 HVLP Gravity Feed Sprayer Product Safety Information Manual 16576563,
 HVLP Gravity Feed Sprayer Product Information Manual 04580668,
 HVLP Gravity Feed Sprayer Maintenance Information Manual 16577645.



www.irtools.com

© 2005 Ingersoll-Rand Company

Form 16577637

Edition 1

April 2005