



16572588

Edition 1

June 2006

Air Drill

QA90 X 90

Maintenance Information



Save These Instructions

IR *Ingersoll Rand*



WARNING

Always wear eye protection when operating or performing maintenance on this tool.

Always turn off the air supply and disconnect the air supply hose before installing, removing or adjusting any accessory on this tool, or before performing any maintenance on this tool.

Lubrication

Each time a Series QA 90 x 90 Angle Drill is disassembled for maintenance and repair or replacement of parts, lubricate the tool as follows:

1. Coat all exposed gears with **Ingersoll Rand No. 67 Grease** and work some of the Grease into the gearing of the Spindle Assembly (41) and Angle Head Assembly (56 and 66).
2. Use **Ingersoll Rand No.10 Oil** to lubricate the motor. Inject approximately 1 to 2 cc of oil into the air inlet before attaching the air hose to the tool.

Speed Adjustment

Series QA 90 x 90 Angle Drills are furnished with the ability to precisely control speed, within certain ranges. Setting the speed requires a tachometer. Although the adjustment is simple, only a competent technician using the proper equipment should attempt it.

The Back Cap (7) has a small, molded stud on the end face of the Cap nearest the Exhaust Diffuser (16). Take an initial

reading of the tool speed by applying a tachometer to the end of the Spindle (60) without a drill bit and with the Lever (11) completely depressed. If the tachometer has a concave tip, close the Chuck completely; if the tip is convex, open the Chuck completely.

After determining the actual velocity, shut off the air supply and disconnect the airline. Use a 3/4" wrench to loosen the Inlet Bushing (17). The longest slot in the Exhaust Diffuser will contain the molded stud on the Back Cap. Rotate the Diffuser to open the exhaust ports to increase speed or rotate it to restrict the exhaust to reduce speed. Being careful not to allow the Diffuser to damage the molded stud, tighten the Inlet Bushing to 15 ft-lbs. (20 Nm) torque. Connect the airline and restore the air supply and check the velocity again. Determine which direction you need to rotate the Diffuser to obtain the desired speed and then rotate it accordingly. Best results are achieved by using gradual increments and frequent tachometer readings. Be sure to turn off the air supply and disconnect the line when making adjustments.

Disassembly

General Instructions

1. Do not disassemble the tool any further than necessary to replace or repair damaged parts.
2. Whenever grasping a tool or part in a vise, always use leather-covered or copper-covered vice jaws to protect the surface of the part and help prevent distortion. This is particularly true of threaded members and housings.
3. Do not remove any part that is a press fit in or on a subassembly unless the removal of that part is necessary for repairs or replacement.
4. Do not disassemble the tool unless you have a complete set of gaskets and O-rings for replacement.
5. Lightly grasp the flats of the Motor Housing in leather- covered or copper-covered vise jaws with the Inlet Bushing (17) upward.
6. Place a 1-3/16" wrench on the flats of the Back Cap (7) to prevent it from rotating, and use a 3/4" wrench to unscrew and remove the Inlet Bushing.
7. Lift the Exhaust Diffuser (16) off the Back Cap.
8. If the Throttle Valve Spring (15) did not come out of the tool with the Inlet Bushing, use needle nose pliers to remove it and the Throttle Valve (14) from the Motor Housing.
9. If the Throttle Valve Seat (13) is damaged and must be replaced, insert a hooked tool through the central opening of the Seat and pull it from the Motor Housing.
10. Using a 1/16" pilot punch, tap the Throttle Lever Pin (12) out of the Back Cap and remove the Throttle Lever (11).
11. Pull the Throttle Plunger (6) out of the Motor Housing and remove the assembly from the vise.
12. Holding the assembly horizontally, remove the Back Cap, the Memory Chip (10) (if included with the tool), and the Back Cap Gasket (8).
13. If the Muffler Elements (9) need to be cleaned or replaced, pull them out of the Back Cap.
14. Grasp the flats at the inlet end of the Motor Housing in leather-covered or copper-covered vise jaws, and using a 1-1/16" wrench on the flats of the Gear Case, unscrew and remove the Gear case from the Motor Housing.
15. Set the assembled Gear Case on the workbench.
16. Remove the Motor Clamp Washer (33) and the Motor Seal (32) from the assembled motor in the Housing.
17. Tap the Motor Housing on a block of wood to remove the Motor Assembly from the Motor Housing.

Disassembly of the Tool

Each Series QA 90 x 90 Angle Drill is composed of four modules including a housing and throttle unit, a motor unit, a combined gearing with spindle unit and an angle head unit. The tool can be disassembled for repairs to each individual unit without disturbing the other units. To separate the modules, proceed as follows:

1. Lightly grasp the body portion of the Angle Head (56) in copper-covered or leather-covered vise jaws in a manner that provides access to the Coupling Nut (51).

NOTICE

The Coupling Nut has a left-hand thread. Rotate the Nut clockwise to loosen it.

2. Using a wrench on the flats of the Coupling Nut, loosen the Coupling Nut and then remove the tool from the vise jaws.
3. With the Angle Head upward, unscrew the Coupling Nut and pull the assembled Angle Head off the front end of the tool. Remove the Housing Lock Spacer (49) from the Angle Head or Gear Case (42).
4. Remove the Grip Spacer (49A) and pull the Grip Assembly (46) off the Gear Case.

Disassembly of the TRL5F28 and TRL5F40

Angle Heads

1. Carefully grasp the assembled Angle Head in leather-covered or copper-covered vise jaws with the input end of the Angle Head in a downward position.

NOTICE

The thread in the following step is a left-hand thread. Rotate the Coupling Nut (62) in the indicated direction to loosen it.

2. Remove assembled Lower Angle Head (66) from assembled Upper Angle Head (56). Pinion (65) and Bearings (61) can be removed from assembled Lower Angle Head (66), and Adapter (64) can be removed from assembled Angle Head (56).
3. Grasp the assembled Lower Angle Head (66) lightly in copper-covered or leather-covered vise jaws with the output upward.

NOTICE

The thread in the following step is a left-hand thread. Rotate the wrench clockwise to remove the Bearing Cap (68).

4. Use a fixed or adjustable face spanner wrench to unscrew and remove the Spindle Bearing Cap (68).
5. Pull the assembled Spindle (67) out of the Angle Head.
6. Slide the two Spindle Bearings (61) off the Spindle.
7. To remove the Spindle Upper Bearing Shaft (59), stand the gear end of the Spindle on a block with clearance for the Shaft. Insert a 1/8" round rod into the opening in the output end of the Spindle and using an arbor press, press the Shaft out of the Spindle.
8. If the Spindle Upper Bearing (58) must be replaced, press the Bearing and Spindle Upper Bearing Cap (57) out the end of the Angle Housing opposite the spindle end.
9. Reposition assembled Upper Angle Head (56) with input upward.
10. Slide the Upper Housing Coupling Nut (51) toward the output end of the assembled Upper Angle Head (56) and using a thin blade screwdriver, work the Coupling Nut Retaining Ring (50) out of the groove in the Angle Head. Slide the Coupling Nut off the Angle Head.
11. Using a piece of 9/16" hexagon bar stock with a 1/4" hole drilled 3/4" deep in the center to clear the hex of the Bevel Pinion (55) and a 9/16" wrench, unscrew and remove the Angle Housing Plug (52).
12. To pull the assembled Bevel Pinion out of the Angle Head, proceed as follows:
 - a) Gather together a 1/2" square drive socket that would be used for a nut that is larger than 1" and an 8-32 UNC socket head cap screw that is 1/2" longer than the socket. In addition, a nut for the Screw and a flat washer that is larger than the socket with a hole that is smaller than the nut, yet is thick enough to withstand some pressure, are also necessary. A wrench for the nut and a hex wrench for the screw are also required.
 - b) Thread the nut onto the cap screw until it stops against the screw head.
 - c) To restrict the rotation of the small angle head Spindle (60), thread a 1/4"-28 thread bolt into the Spindle or insert a rod into the collet and clamp the bolt or rod into a vise with the motor end upward.
 - d) Place the square drive end of the socket against the notched end of the Angle Head.
 - e) With the cap screw and nut inserted through the flat washer, thread the cap screw through the square drive opening into the end of the Bevel Pinion until it bottoms out.

f) Thread the nut along the cap screw until it contacts and holds the flat washer against the Angle Head.

g) Use a hex wrench to hold the cap screw in position while turning the nut with a wrench to jack the assembled Bevel Pinion out of the Angle Head. Unscrew the cap screw from the Bevel Pinion.

13. Slide the Pinion Rear Bearing (53) and Pinion Front Bearing (54) off the Bevel Pinion.
14. Reposition assembled Upper Angle Head (56) in vise with the input end downward. Pull Lower Housing Coupling Nut (62) over so that flats of Coupler (63) are exposed. Grip on flats and unscrew.
15. Remove Spindle Bearings (61) and Bevel Gear (60) from the assembled Upper Angle Head (56).
16. To remove the Spindle Upper Bearing Shaft (59), stand the gear end of the Spindle on a block with clearance for the Shaft. Insert a 1/8" round rod into the opening in the output end of the spindle and using an arbor press, press the Shaft out of the spindle.
17. If the Spindle Upper Bearing (58) must be replaced, press the Bearing and Spindle Upper Bearing Cap (57) out the end of the Angle Housing opposite the Spindle end.

Disassembly of the Gearing

1. Using snap ring pliers, remove the Gear Retainer (34) from inside the Gear Case (42) and remove the Gear Head Spacer (35).
2. **For Series QA35**, lightly rap the motor end of the Gear Case on a wooden work bench top to remove the Planet Gear Head Drive Plate (36).

For Series QA21, QA27 and QA35, lightly rap the motor end of the Gear Case on a wooden work bench top to remove the Planet Gear Head Drive Plate (36), Planet Gear Head Assembly (37) and the Planet Gear Head Spacer (40).

For Series QA05, QA08, QA12 and QA17, lightly rap the motor end of the gear case on a wooden work bench top to remove the three Planet Gears (38), the Planet Gear Head Assembly (37) and the Planet Gear Head Spacer (40).

For Series QA12, lightly rap the motor end of the Gear Case on a wooden work bench top to remove the three Planet Gears (38), the Gear Head Pinion (39), the Planet Gear Head Assembly (37) and the Planet Gear Head Spacer (40).

3. Using snap ring pliers, remove the Spindle Bearing Retaining Ring (44).
4. Stand the Gear Case on the table of an arbor press with the output spindle upward. Using a rod that neatly fits inside the internal hex of the Spindle (41), press the spindle Assembly out of the Spindle Bearing (43).



CAUTION

Do not remove the Bearing in the following step unless you have a new replacement available for installation. The Bearing will be damaged as a result of the removal process.

5. Invert the Gear Case on the table of an arbor press so that the end face having the four notches makes contact with the table. Using a rod against the inner race of the Spindle Bearing, press the Bearing from the Gear Case.
6. If the Spindle Bearing Seat (45) must be replaced, use a small, thin blade screwdriver to spiral it out of the groove in the Gear Case.

Disassembly of the Motor

1. If the motor was not removed from the Housing (1) when the tool was disassembled, slide the Motor Clamp Washer (33) off the shaft of the Rotor (27) and remove the Motor Seal (32).
2. Tap the Motor Housing on a block of wood to remove the motor assembly from the Motor Housing.
3. Using snap ring pliers, remove the Rear End Plate Assembly Retainer (23) from the shaft of the Rotor.
4. Pull the Rear End Plate Face Plate (22) and Rear End Plate Assembly (21) off the hub of the Rotor.
5. Using a piece of leather or other type of protective material, grasp the shaft of the Rotor and pull the Rotor out of the Cylinder (24).
6. Remove the Vanes (28) from the Rotor.
7. Support the Front End Plate Assembly (29), as near the rotor body as possible, on the table of an arbor press and

press the Rotor from the Front Rotor Bearing (31).
Remove the Bearing from the Front End Plate.

Disassembly of the Housing

1. Pull the Housing Plug Cover (20) off the inlet end of the Motor Housing (1).
2. If the Housing Plug (3) does not drop out of the Housing when the Cover is removed, tap the inlet end of the Housing on a block of wood to dislodge the Plug from the Housing.
3. Insert a 5/16" wooden dowel between 6 and 8 inches long, into the inlet end of the Motor Housing and push the Reverse Valve Assembly (4) out the motor end of the Housing.
4. Use a hooked tool to pull the Housing O-ring (2) out of the Motor Housing.

Assembly

General Instructions

1. Always press on the **inner** ring of a ball-type bearing when installing the bearing on a shaft.
2. Always press on the **outer** ring of a ball-type bearing when pressing the bearing into a bearing recess.
3. Whenever grasping a tool or part in a vise, always use leather-covered or copper-covered vise jaws to protect the surface of the part and help prevent distortion. This is particularly true of threaded members and housings.
4. Except for bearings, always clean every part and wipe every part with a thin film of oil before installation.
5. Apply O-ring lubricant to all O-rings before final assembly.
6. Check every bearing for roughness. If an open bearing must be cleaned, wash it thoroughly in a clean, suitable cleaning solution and dry with a clean cloth. **Sealed or shielded bearings should never be cleaned.** Lubricate all open bearings with grease before installation.

Assembly of the Housing

1. Lubricate the Housing O-ring (2) with O-ring lubricant and install it at the bottom of the cylinder bore in the Motor Housing (1).
2. Inspect the face and Reverse Valve Seal (5) on the hub of the Reverse Valve Assembly (4) for nicks or damage. Replace the Reverse Valve Assembly or Seal if any damage is evident.
3. Lubricate the Reverse Valve Seal with O-ring lubricant and insert the Assembly, seal end leading, into the cylinder bore of the Motor Housing. Push the Assembly toward the bottom of the cylinder bore until it "snaps" into its proper location.
4. Rotate the Valve inside the Housing until the threaded hole into the side of the Valve aligns with the hole for the Housing Plug (3) in the side of the Motor Housing.
5. Insert the pin end of the Housing Plug into the hole in the Reverse Valve and fit the remainder of the Plug into the recess in the Motor Housing.
6. While holding the Plug in position, from the inlet end of the Housing, slide the Housing Plug Cover (20) onto the Housing. Make certain it captures the Plug when it moves along the Housing and stops against the housing shoulder.

Assembly of the Motor

1. Place the Front End Plate (29) on the splined shaft of the Rotor (27) with the bearing recess away from the rotor body.
2. Place the Front Rotor Bearing (31) onto the shaft and using a sleeve or piece of tubing that makes contact with the inner race of the Bearing, press the Bearing onto the


shaft until the Front End Plate nearly contacts the rotor body.

NOTICE

In the following step, the measurement must be made at the end corner of the large rotor body.

3. The clearance between the Front End Plate and Rotor is critical. While pressing downward with your finger on the outer edge of the Front End Plate on the bearing side of the End Plate, insert a 0.004" (0.1 mm) feeler gauge between the face of the rotor body and the face of the End Plate at a point that is 180 degrees away from where the pressure is applied. Refer to Dwg. TPA1740. To increase the gap, support the End Plate and lightly tap the rotor shaft with a plastic hammer; to decrease the gap, press the Bearing farther onto the rotor shaft.

Measurement of Front End Plate Clearance

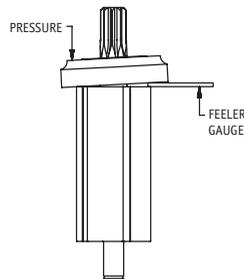

(Dwg. TPA1740)

4. Wipe each Vane (28) with a light film of **Ingersoll Rand No.10 Oil** and place a Vane in each slot in the Rotor.
5. One end of the Cylinder Assembly (24) has a notch that breaks the outer wall and end face of the Cylinder. With that end trailing, install the Cylinder Assembly over the Rotor and Vanes against the Front End Plate. Make certain the Cylinder Front Alignment Pin (26) enters the hole in the Front End Plate.
6. Install the Rear End Plate Assembly (21), flat face leading, on the rear hub of the Rotor. Make certain the Cylinder Rear Alignment Pin (25) enters the hole in the Rear End Plate.
7. Examine the Rear End Plate Face Plate (22) for scratches. If it is scratched, replace it. If it is not, slide it

onto the rear hub of the Rotor and onto the Cylinder Rear Alignment Pin against the Rear End Plate. Some pressure may be required to fit the hole in the Plate onto the Alignment Pin.

8. Using snap ring pliers, install the Rear End Plate Assembly Retainer (23) in the annular groove on the rear rotor hub to secure the assembly in position.
9. Set the assembled motor aside.


Assembly of the Gearing

1. Using a small screwdriver, work the Spindle Bearing Seat (45) into the internal groove nearest the notched end of the Gear Case (42).
2. Stand the Gear Case, notched end upward, on the table of an arbor press. Using a piece of tubing that contacts the outer race of the Spindle Bearing (43), press a new Bearing into the Gear Case against the Seat.
3. Lubricate the gears in the Spindle Assembly (41) with **Ingersoll Rand** No. 67 Grease.
4. Invert the Gear Case and using another piece of tubing that supports the inner race of the Bearing and clears the output end of the Spindle Assembly, press the Spindle Assembly into the Bearing from the motor end of the Gear Case.
5. Using snap ring pliers, install the Spindle Bearing Retainer (44) in the external groove near the drive end of the spindle.
6. **For all tools except Series QA35**, apply some **Ingersoll Rand** No. 67 Grease to the Planet Gear Head Spacer (40) and the shafts of the Planet Gear Head Assembly (37).
7. **For all tools except Series QA35**, insert the Planet Gear Head Spacer (40) and Planet Gear Head Assembly (37), spline hub leading, into the open end of the Gear Case.
8. **For Series QA05, QA08, QA12 and QA17**, apply **Ingersoll Rand** No. 67 Grease to the three Planet Gears (38) and install them on the shafts of the Planet Gear Head Assembly.
9. **For Series QA35**, apply **Ingersoll Rand** No. 67 Grease to the Gear Head Pinion (39) and while meshing the gear teeth, insert it in the opening between the three Planet Gears.
10. **For Series QA21, QA27 and QA35**, install the Planet Gear Head Drive Plate (36) on the shafts of the Planet Gear Head Assembly.
11. Place the Gear Head Spacer (35) in the Gear Case and secure the assembly by using snap ring pliers to install the Gear Retainer (34) in the angular groove inside the Gear Case.

Assembly of the TRL5F28 and TRL5F40 Angle Heads

1. If the Spindle Upper Bearing (58) was removed, stand the output end of the Lower Angle Head (56) on the table of an arbor press. Using a Needle Bearing Inserting Tool as shown in Dwg. TPD786, press the Bearing into the small opening at the top of the Angle Head. Press Plug (57) until top is flush with Upper Angle Head (56) surface.
2. Apply a light film of **Ingersoll Rand** No. 67 Grease to the shaft of the Bevel Pinion (55) and to the inside of the Pinion Front Bearing (54).
3. Slide the Pinion Front Bearing, stamped end trailing, onto the shaft until it stops against the back of the gear.
4. Without distorting the Angle Head, support the hex flats of the Angle Head in a machine vise on the table of an arbor press with the notched end upward and the Head resting on a solid stop. Apply 2 to 4 cc of **Ingersoll Rand** No. 67 Grease to the gear on the end of the Bevel Pinion.

Needle Bearing Inserting Tool

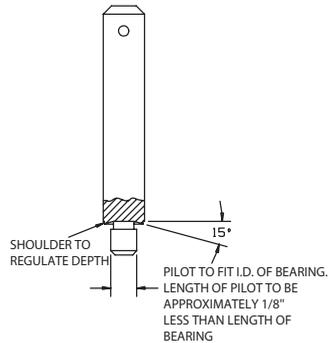

(Dwg. TPD786)

5. Insert the gear end of the Bevel Pinion into the notched end of the Angle Head while aligning the Pinion Front Bearing with the central opening.
6. Use a piece of tubing that clears the shaft of the Bevel Pinion and the inner wall of the Angle Head and is between 1.455" and 1.465" (36.95 and 37.21 mm) long to press the Bearing into the Angle Head. Press the Bearing until the trailing end of the pressing tube is flush with the notched end of the Angle Head.
7. Apply some **Ingersoll Rand** No. 67 Grease to the Pinion Rear Bearing (53) and slide it onto the shaft of the Bevel Pinion and into the Angle Head recess.
8. Use the 9/16" hex stock with clearance for the bevel pinion shaft that was used during disassembly to screw the Angle Head Plug (52) into the Angle Head against Pinion Rear Bearing. Tighten the Plug between 10 and 15 ft. lbs. (13.5 and 20.3 Nm) torque.
9. Remove the assembly from the machine vise and position it in leather-covered or copper-covered vise jaws with the opening for the output spindle upward.
10. If the spindle Upper Bearing Shaft (59) was removed, stand the output end of the Spindle (60) on the table of an arbor press. One end of the Shaft has a bevel and the other end is rounded. Press the Shaft, bevel leading, into the gear end of the Spindle until rounded end extends above the shoulder of the gear 0.551" to 0.554" (14.0 to 14.1 mm).
11. Slide the Spindle Bearings (61) onto the shaft of the Spindle against the gear and insert the assembled Spindle, gear end leading, into the Angle Head. Push the Bearing into the housing below the threads.

NOTICE

The thread in the following step is a left-hand thread. Rotate the Coupling Nut (62) in the indicated direction to tighten it.

12. Slide Lower Housing Coupling Nut (62) onto Coupler (63) so Coupling Nut rests on flange. Grip on flats of Coupler and thread into Upper Angle Head housing (56). Tighten the Coupler between 5 and 10 ft-lbs (6.8 and 13.5 Nm).
13. If the Spindle Upper Bearing (58) was removed, stand the output end of the Lower Angle Head (66) on the table of an arbor press. Using a Needle Bearing Inserting Tool as shown in Dwg. TPD786, press the Bearing into the small opening at the top of the Angle Head. Press Plug (57) until top is flush with Lower Angle Head (66) surface.
14. If the Spindle Upper Bearing Shaft (59) was removed, stand the output end of the Spindle (67) on the table of an arbor press. One end of the Shaft has a bevel and the

other end is rounded. Press the Shaft, bevel leading, into the gear end of the Spindle until rounded end extends above the shoulder of the gear 0.551" to 0.554" (14.0 to 14.1 mm).

15. Grasp the Lower Angle Head (66) in leather-covered or copper-covered vise jaws with output end upward.
16. Slide the Bevel Gear (67) and Spindle Upper Bearing Shaft (59) assembly into output end of Lower Angle Head housing (66). Slide the Bearings (61) onto the Bevel Gear shaft.

NOTICE

The thread in the following step is a left-hand thread. Rotate the wrench counterclockwise to tighten the Bearing Cap (68).

17. Thread the spindle Bearing Cap (68) into the Lower Angle Head (66) and using a spanner wrench, tighten the Cap between 5 and 10 ft-lbs. (6.8 and 13.5 Nm) torque.
18. Reposition Lower Angle Head (66) with input end upward. Slide Lower Housing Pinion (65) into Angle Head and slide Bearings (61) onto Pinion Shaft.
19. Slide Adapter (64) onto Lower Housing Pinion (65).
20. Take assembled Upper Angle Head (56) and connect output end with input end of assembled Lower Angle Head (66). Adapter (64) connects Bevel Gear (60) to Lower Housing Pinion (65). Thread Lower Housing Coupling Nut (62) onto assembled Lower Angle Head (66). Torque between 5 and 10 ft-lbs. (6.8 and 13.5 Nm).
21. Remove the assembly from the vise jaws and slide the Upper Housing Coupling Nut (51), threaded end trailing, onto the notched end of Upper Angle Head (56). Move the Nut far enough onto the housing to install the Coupling Nut Retainer (50) in the angular groove at the notched end of the Upper Angle Head (56).

Assembly of the Tool

1. Lightly grasp the flats on the Motor Housing (1) in leather-covered or copper-covered vise jaws with the inlet end of the tool upward.
2. Insert a 5/8" dowel through the opening in the Back Cap (7), and using the dowel as an alignment device, install the three Muffler Elements (9) in the cavity of the Back Cap. Make certain the notches in the outer edge of the Elements fit over the memory chip pocket in the bottom of the Cap.
3. **If the tool is equipped with a Memory Chip (10)**, install it (with the leads entering first) in the pocket at the bottom of the Back Cap.
4. Make certain the tab on the inside edge of the Back Cap Gasket (8) is aligned with the pocket for the Memory Chip and install the Gasket, metal face leading, in the recess of the Back Cap against the face with the cavity containing the Muffler Elements.
5. Position the gasket end of the alignment dowel against the inlet hub on the Motor Housing. Align the flats on the Cap with the flats on the Housing. Orient the Back Cap and slide the Back Cap Assembly off the alignment dowel and onto the Motor Housing.
6. The Exhaust Diffuser (16) has one slot that is longer than the other five slots. The Back Cap has a short, molded stud projecting from inlet end. Place the Exhaust Diffuser against the Back Cap with the long slot encircling the molded stud. Rotate the Diffuser counterclockwise until the wall of the slot stops against the stud. The exhaust ports are now in the full open position and will provide maximum free speed.
7. Being careful not to damage it, insert the Throttle Valve Seat (13) into the central opening at the inlet end of the Motor Housing at an angle until it clears the threads in the Housing. Using a rod with a flat end and no sharp edges,

push the Seat to the bottom of the opening until it seats flush.

8. Using needle nose pliers, insert the Throttle Valve (14), long stem leading, into the opening against the Seat. Center the Valve in the Seat.
9. Install the Throttle Valve Spring (15) in the opening so that it encircles the Valve.
10. If the Inlet Screen (19) required replacement, use a wooden dowel to carefully push a new one into the Inlet Bushing (17).
11. If the Inlet Bushing Seal (18) is nicked or damaged, carefully install a new one over the threads of the Inlet Bushing.
12. Thread the Inlet Bushing Assembly through the Diffuser and Back Cap into the Motor Housing. Using a 1-3/16" wrench on the flats of the Back Cap to keep it from turning, tighten the Inlet Bushing between 15 and 20 ft lbs. (20 and 27 Nm) torque.
13. The Throttle Plunger (6) has a lengthwise flat on the outer edge at one end of the Plunger. Insert the Plunger, flat end first, into the cross-hole in the Housing. Push on the end of the Plunger to make certain it springs back from contact with the stem of the Throttle Valve.
14. Position the Throttle Lever (11) in the slot in the Back Cap and Motor Housing and using a 1/16" diameter rod, align the holes through the Back Cap, Motor Housing and Throttle Lever. While maintaining alignment, install the Throttle Lever Pin (12) in place of the rod by tapping it through all three pieces.
15. Remove the assembled Housing from the vise jaws.
16. Lightly grasp the flats of the Motor Housing in leather-covered or copper-covered vise jaws with the motor bore upward.
17. Grasp the spline of the Rotor (27) in the assembled motor and after aligning the End Plate Alignment Pin (30) with the internal notch in the motor end of the housing bore, insert the assembled motor into the Motor Housing. Make certain the motor is far enough into the Housing to have the undercut below the internal housing thread visible.
18. Lubricate the Motor Seal (32) with O-ring lubricant and install it around the Front End Plate (29) and into the undercut in the Housing.
19. Align the tab of the Motor Clamp Washer (33) with the internal notch in the Housing and install it over the rotor hub and End Plate Alignment Pin against the Motor Seal. Make certain the Pin enters the hole in the Washer and the Washer is flat against the Seal.
20. Apply some **Ingersoll Rand** No. 67 Grease to the spline on the rotor shaft.
21. Thread the assembled Gear Case (42) and Spindle Assembly (41), gear case end leading, into the Motor Housing and using a 1-1/16" wrench, tighten the joint between 15 and 20 ft-lbs. (20 and 27 Nm) torque.
22. Install the Housing Grip (46), internal slotted end leading, over the motor and Housing and engage the slots in the Grip with the projections on the Housing.
23. Position the Housing Lock Spacer (49) in the Gear Case with the tabs of the Spacer going into the notch openings.

NOTICE

The thread in the following step has left-hand thread. Rotate the Nut counterclockwise to tighten it.

24. Orient the assembled Angle head to the desired position and insert the notched end of the Angle head into the Gear Case to engage the tabs of the Spacers. Make certain the external hex of the Bevel Pinion (55) enters the hex recess of the Spindle Assembly (41). Thread the Coupling nut (51) onto the Gear Case and tighten it between 2 and 5ft-lbs. (.27 and 6.8 Nm) torque.
25. Remove the tool from the vise jaws.

26. Check the free speed of the tool using a tachometer and following the instructions in the **SPEED ADJUSTMENT** section of this manual.

Troubleshooting Guide

Troubleshooting Guide		
Trouble	Probable Cause	Solution
Loss of Power	Low air pressure.	Check air supply. For top performance, the air pressure must be 90 psig (6.2 bar/620 kPa) at the inlet.
	Plugged Inlet Bushing Screen.	Clean the Inlet Bushing Screen using a clean, suitable, cleaning solution. If the Screen cannot be cleaned, replace it.
	Worn or broken Vanes.	Replace the complete set of Vanes.
	Worn or broken Cylinder.	Replace the Cylinder if it is cracked or if the bore appears wavy or scored.
	Exhaust control restricted.	Make certain the Exhaust Diffuser is in the fully open position.
Motor won't run	Motor Clamp Washer binding.	Remove the Gear Case make certain the Washer is flat and the Motor Seal is properly positioned.
	Gears binding.	Clean and inspect all gearing. Replace any worn or damaged gearing.
Leaky Throttle Valve	Worn Throttle Valve and/or Throttle Valve Seat.	Install a new Valve and/or Seat.
	Dirt accumulation on Throttle Valve and/or Throttle Valve Seat.	Clean or replace the Throttle Valve and/or Throttle Valve Seat.
Gear Case gets hot	Excessive grease.	Clean and inspect Gear Case and gearing parts and lubricate as instructed.
	Worn or damaged parts.	Clean and inspect the Gear Case and gearing. Replace worn or broken components.

Related Documentation

For additional information refer to:
 Air Drill Product Safety Information Manual Form 04580353.
 Air Drill Product Information Manual Form 16572281.
 Air Drill Parts List Manual Form 16572851.

Manuals can be downloaded from www.irttools.com

www.irtools.com

© 2006 Ingersoll Rand Company

