DPERATOR'S MANUAL

INCLUDING: OPERATION, INSTALLATION & MAINTENANCE

61860

RELEASED: 10-22-75 REVISED: 08-20-93 FORM 191-2

61860 & 61861

RIGID FOGSPRAY WAND ASSEMBLY

IMPORTANT: READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

ASSEMBLY INSTRUCTIONS

The Fogspray Wand Assembly is shipped complete in one carton. When unit is unpacked, check to be sure Y23-162 set screw is located in line with material slots in 61901 tube as shown in view.

OPERATING INSTRUCTIONS

The 61860 & 61861 spray wand assembly is used on places where straight structures exist, such as door panels, or where operator desires a more definite control on the exact position of the wand.


When using spray wand assembly place the tip of the wand into the section to be fogged. Position the wand indicator (the Y23-162) in a horizontal position and fog on the outward stroke. When the end of the stroke is reached, rotate wand indicator 180° and fog other side of section on the inward stroke.

CAUTION: When fogging on the outward stroke and you reach the notches on the 61901 tube, you have approximately (1) inch until material slot will be visible and you will be spraying outside of the panel.

NOTE: Use extreme caution when working on doors which contain power window mechanisms, so as not to damage mechanism or wiring. If in doubt, remove inner door panel & spray directly.

CLEANING HINTS

To prevent material from hardening in the spray wand, clean thoroughly after using. Clean with solvent. Clean material slot with a stiff brush, (such as an old tooth brush). Remove screw (Y3-44-C) and flush material from inside of tube.

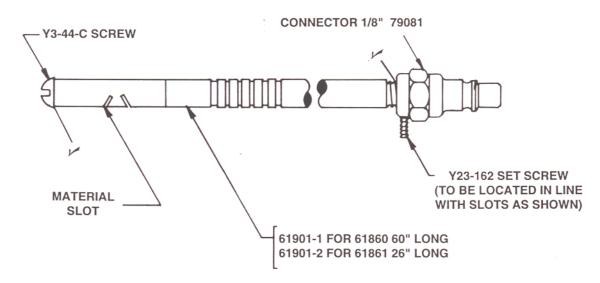

✓ USE PERM-LOK SEALANT ON THREADS

FOGSPRAY RIGID WAND ASS'Y.

