


61705

TOTALIZING COUNTER KIT ASSEMBLY



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,
OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

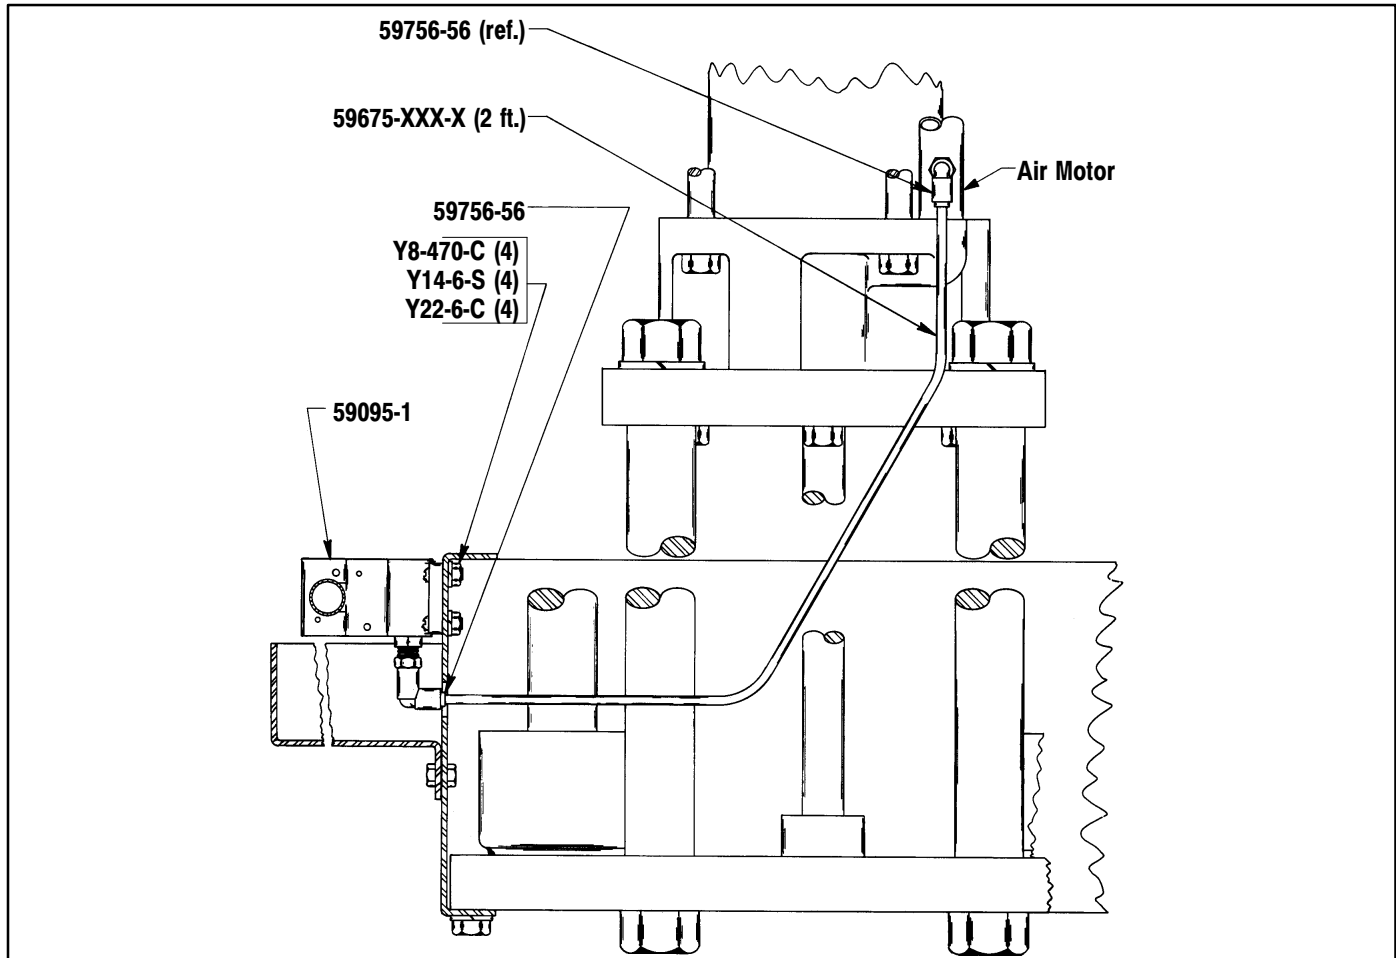

PROCEUDRE TO INSTALL 61705 TOTALIZING COUNTER KIT ASSEMBLY

1. Thread 59756-56 male elbow fitting into the 1/8" N.P.T. hole on the underside of the 59095-1 pulse counter, and wrench tighten.
2. Above the tray and towards the right side of the side panel on the lift are four 5/32" diameter holes and one 5/8" diameter hole. Align the counter with these four holes so that the male elbow fitting protrudes through the 5/8" diameter hole.
3. Through each of the four holes on the counter insert one Y8-470-C screw and fasten to the panel with the Y14-6-S lockwashers and Y22-6-C nuts.
4. Remove plug from 59756-56 male elbow fitting on air motor by pulling plug in one direction while at the same time, with the blade of a screwdriver, exert pressure in the opposite direction on the metal ring of the fitting.
5. For final hook-up install the 59675-XXX-X (2 ft.) tube between the two 59756-56 male elbow fittings.

PN 97999-310

INGERSOLL-RAND COMPANY
P.O. BOX 151 • ONE ARO CENTER • BRYAN, OHIO 43506-0151
☎ (419) 636-4242 • FAX (419) 633-1674 ©2000 • PRINTED IN U.S.A.

