


**AIR WINCH
INSTALLATION INSTRUCTION SHEET
for
SAFETY TAG KIT 29452 and 29478**


This instruction sheet provides information on how and where to install the safety tag on a winch.

SAFETY TAG PLACEMENT INSTRUCTIONS

1. Insert wire tie through link of air motor vent cap chain or through the eye hook on the motor. Position will vary depending on winch model.
2. Pull one end of wire tie through hole in label.
3. Insert wire tie through holes in crimp. Use a crimp tool to securely clamp on wire tie.

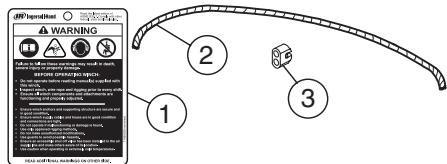

(Dwg. MHP2574)

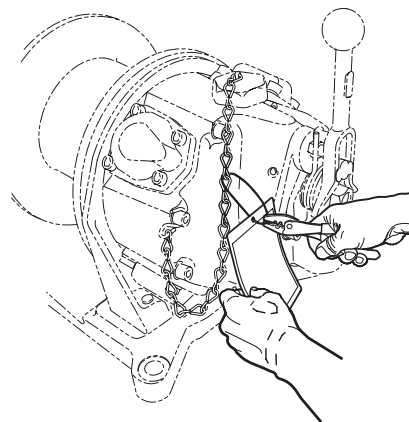

(Dwg. MHP2563)

Kit 29452 - Non Man Rider

Item No.	Description of Part	Qty. Total	Part Number
1	Label, Warning	1	71060529
2	Wire Tie	1	71410559
3	Crimp	1	71410542

Kit 29478 - Man Rider

Item No.	Description of Part	Qty. Total	Part Number
1	Label, Warning	1	71124887
2	Wire Tie	1	71410559
3	Crimp	1	71410542

Form MHD56268

Edition 1

71423776

June 2003

© 2003 Ingersoll-Rand Company




**AIR WINCH
INSTALLATION INSTRUCTION SHEET
for
SAFETY TAG KIT 29452 and 29478**


This instruction sheet provides information on how and where to install the safety tag on a winch.

SAFETY TAG PLACEMENT INSTRUCTIONS

1. Insert wire tie through link of air motor vent cap chain or through the eye hook on the motor. Position will vary depending on winch model.
2. Pull one end of wire tie through hole in label.
3. Insert wire tie through holes in crimp. Use a crimp tool to securely clamp on wire tie.

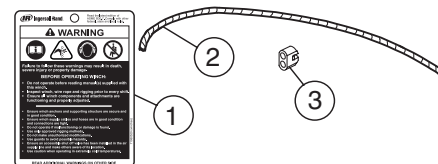

(Dwg. MHP2574)

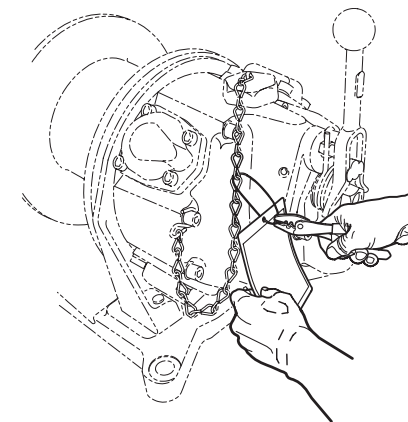

(Dwg. MHP2563)

Kit 29452 - Non Man Rider

Item No.	Description of Part	Qty. Total	Part Number
1	Label, Warning	1	71060529
2	Wire Tie	1	71410559
3	Crimp	1	71410542

Kit 29478 - Man Rider

Item No.	Description of Part	Qty. Total	Part Number
1	Label, Warning	1	71124887
2	Wire Tie	1	71410559
3	Crimp	1	71410542

Form MHD56268

Edition 1

71423776

June 2003

© 2003 Ingersoll-Rand Company

