### NP443R01-X

**INCLUDING: OPERATION. INSTALLATION & MAINTENANCE** 

INCLUDE MANUALS: 6712X-X EXTRUSION PUMP (PN 97999-602), 651613-B TWO POST MINI RAM (PN 97999-850), 65184X-X FOLLOWER PLATE (PN 97999-605), R272X1-XXX REGULATOR (PN 100400-6), S-635 GENERAL INFORMATION (PN 97999-635) & S-636 GENERAL INFORMATION (PN 97999-636).

RELEASED: 5-21-999 REVISED: 7-5-0999 (REV. C)

4-1/4" AIR MOTOR 43.6:1 RATIO 4" STROKE

# NP443R01-1 & NP443R01-2 EXTRUSION SYSTEM



# READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT.

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

#### **SERVICE KITS**

61268 for repair of 65440 air motor. 104177 for repair of R27221-100 regulator. 637290-P43 for repair of 67100-P43 lower pump section.


#### **GENERAL DESCRIPTION**

By delivering a smooth, continuous bead of the proper size, an ARO system helps the operator maintain both production rate and produce high quality standards. Maintained quality standards assures that the material benefits are realized. To further maximize operator production time, the ARO system has a built-in lift / ram feature for quick and easy drum changeover and easy lifting of pump assembly from the container.

ARO systems are totally enclosed, sealing the material in the system from air and moisture, preventing premature cure-out of the material. This allows for either continuous or intermittent use of the system and allows the need for daily system clean-up.

#### **MAJOR COMPONENTS**

ltem	<b>Description</b> (Size in inches)	(Qty)	Part No.
Α	Extrusion Pump (43.6:1)	(1)	67124-P43
В	Two-Post Mini Ram	(1)	651613-B
С	Follower Plate (Model NP443R01-1 only)	(1)	651840-3
D	Regulator	(1)	R27221-100

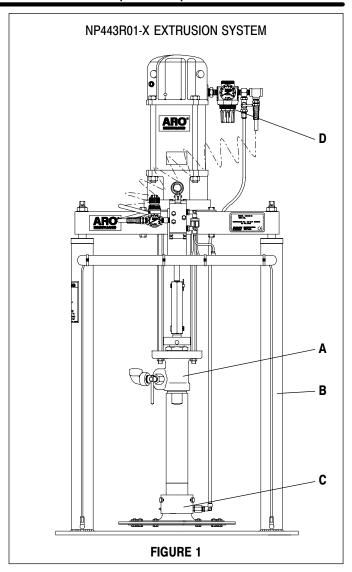



#### INSTALLATION

The NP443R01-X Extrusion System comes completely assembled. Remove the unit from the crate and place on a level surface. Install material hose and dispensing device as required.

When the following instructions are observed, heavy paste materials


can be pumped directly from their original drum without air inclusion or excessive waste. The follower plate creates an air tight seal as well as clean-wiping action in its progressive downward movement into the drum.

#### **OPERATING INSTRUCTIONS**

#### **OPERATING INSTRUCTIONS / INITIAL SETUP PROCEDURE**

**WARNING** STAND CLEAR. When raising or lowering the lift.

Read the warning on page 2 of 651613-B Two Post Lift / Ram Operator's Manual.

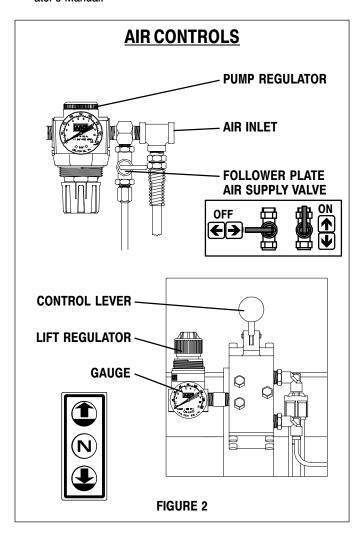

#### TO RAISE LIFT, (THE FIRST TIME):

- Take note of the pump / drum clearance above. Be certain the lift / ram is clear of any objects above. Also refer to "Operating and Safety Precautions" found on page 2 of 651613-B Two Post Lift / Ram Operator's Manual.
- Connect the air supply (150 p.s.i. max.) to the air inlet. Adjust air pressure on lift / ram pressure regulator (turn knob clockwise) to 20 p.s.i. (1.4 bar).
- 3. Shift the control valve lever to the "up" position.

4. Raise the lift / ram high enough to clear the height of the drum. Stop the lift upward travel by moving the control valve lever to the "neutral" (center) position.

#### **REFER TO PAGE 3:**

- Once the lift / ram assembly and pump are in the "up" position, place and center an opened 5 gallon drum of material on the lift / ram base.
- Lubricate the lower follower wiper plate seal with grease. NOTE: Make certain the grease is compatible with the material being dispensed. This ensures a smooth fit into the drum, as well as prevents curing type compounds from bonding to the seal.
- Check the vent plug on the follower plate to be sure it easily threads in and out. It is recommended to lubricate the threads of the plug to help prevent possible set up of the compound at this point (see 651613-B Operator's Manual).

#### TO LOWER LIFT:

<u>^</u>WARNING PINCH HAZARD. Follower can descend quickly, causing injury. Keep hands clear when aligning with container. Read the warning on page 2 of 651613-B Two Post Lift / Ram Operator's Manual.

**NOTE:** Be certain the follower plate vent plug has been removed so that the air trapped between the follower and the material is allowed to escape from this vent. Captured air between the follower plate and drum will escape.

**NOTE:** The lift / ram may hesitate momentarily before starting downward, the air pressure inside the post air chamber must decrease before it will begin to descend.

- Shift the control valve lever to the "down" position and proceed to lower the pump.
- Replace the vent plug once the material begins to ooze from the vent opening.
- The unit is now ready for operation. Adjust the air pressure on the pump filter / regulator (turn the pump regulator knob clockwise) until the pump begins to cycle.
- 4. Trigger the gun to prime the pump with material.

#### TO RAISE LIFT, (NORMAL OPERATION):

- 1. DO NO OVERPRESSURIZE THE DRUM to avoid damage.
- 2. Shift the control valve lever to the "up" position.
- Raise the lift / ram high enough to clear the height of the drum. Stop
  the lift upward travel by moving the control valve lever to the "neutral" (center) position.

#### **TO CHANGE DRUM:**

**NOTE:** The control lever should be in the "neutral" position.

1. Place and center a new drum into position. Remove cover.

PAGE 2 OF 4 NP443R01-X

## PARTS LIST / NP443R01-X

Item	Description (Size in inches)	(Qty)	Part No.
1	Muffler	(1)	91790
2	Reducing Bushing (1/2" n.p.t. x 1/4" n.p.t.)	(1)	45-5-C
3	Nipple (1/4" - 18 n.p.t. x 2" long)	(1)	Y44-11-C
4	Gauge (0 - 160 p.s.i. / 0 - 11 bar)	(1)	100067
5	Oiler Body (1/4" - 18 n.p.t.f.)	(1)	90351
6	Tee (1/4" - 18 n.p.t.)	(1)	Y43-32-C
7	Shut-Off Valve (1/8" - 27 n.p.t.)	(1)	Y28-2
8	1/4" Coil Hose (1/4" - 18 n.p.t.)	(1)	628004-12

Item	Description (Size in inches)	(Qty)	Part No.
9	Connector (1/8" - 27 n.p.t. x .250" o.d. tube)	(1)	59474-56
☆ 10	Tubing (.250" o.d. x 42" long)	(1)	59675-XXX-X
11	Nipple (1/2" - 14 x 3" long)	(1)	Y44-133-N
12	90° Elbow (1/2" - 14 n.p.t. female)	(1)	Y43-214-N
13	Nut (3/8" - 16)	(4)	Y12-106-C
14	Cap Screw (3/8" - 16 x 2-3/4")	(4)	Y6-612-C
15	Mounting Plate	(1)	91519

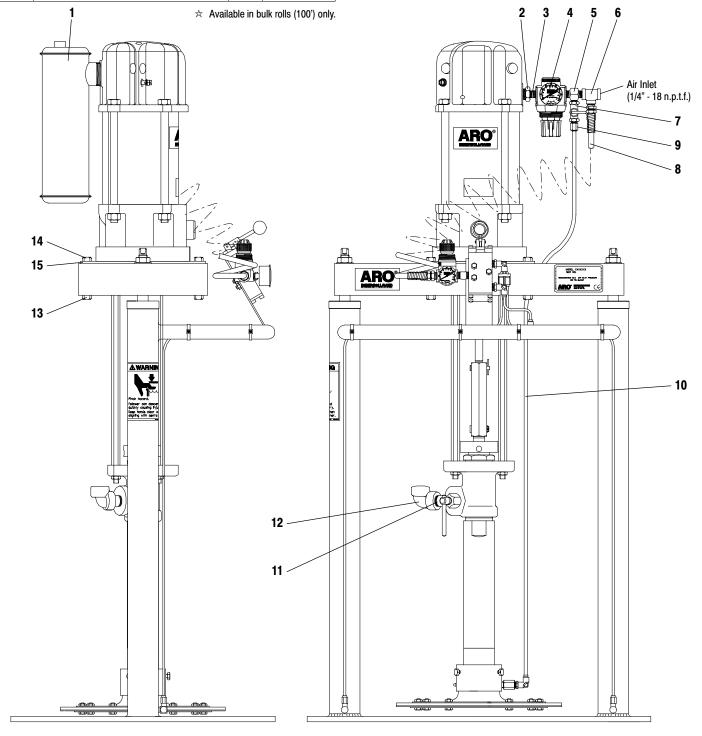


FIGURE 3



PN 97999-856

PAGE 4 OF 4 NP443R01-X